


BM-88

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model



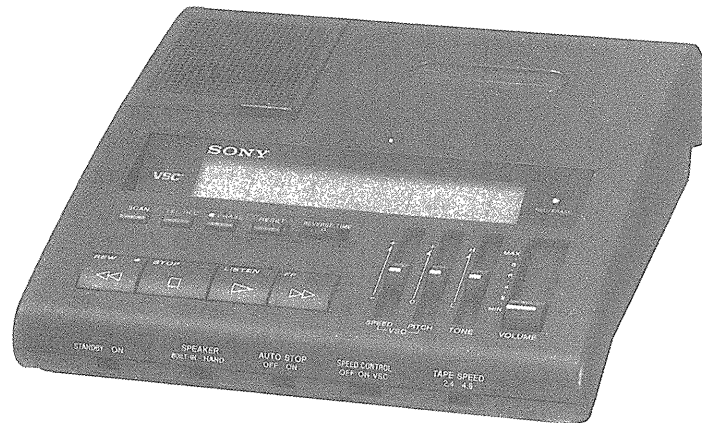

SPECIFICATIONS

Recording system	4-track 2-channel monaural (L channel for electronic index signals, R channel for sound signals)
Tape speed	4.8 cm/s ($1\frac{7}{8}$ in./s), 2.4 cm/s ($\frac{1}{2}$ in./s)
Fast winding time	Approx. 2 min. 20 sec. with Sony cassette DC-90
Frequency response	200 - 5,000 Hz (at 2.4 cm/s) 200 - 8,000 Hz (at 4.8 cm/s)
Speaker	Approx. 5.7 cm ($2\frac{1}{4}$ inches) dia.
Power output	350 mW (at 10% distortion)
Input	TELEPHONE PICKUP (minijack) Sensitivity 0.2 mV Input impedance 10 kohms
Output	EARPHONE (minijack) for 8 - 300-ohm earphones
CONTROL UNIT connector	for HU-80 or FS-75
Power requirements	9 V DC DC IN 9 V jack accepts the supplied AC power adaptor for use on 120 V AC, 60 Hz (US, Canadian model) 220 V AC, 50 Hz (AEP, E model) 240 V AC, 50 Hz (UK model)
Power consumption	14 W (US, Canadian model) (with the supplied AC power adaptor) 13 W (AEP, UK, E model) (with the supplied AC power adaptor)
Dimensions	Approx. 200 x 70 x 245 mm (w/h/d) ($7\frac{7}{8}$ x $2\frac{7}{8}$ x $9\frac{3}{4}$ inches) including projecting parts and controls
Weight	Approx. 1.2 kg (2 lb 11 oz)
Supplied accessory	AC power adaptor (1)


Design and specifications subject to change without notice.

Model Name Using Similar Mechanism	NEW
Tape Transport Mechanism Type	MB-88-59

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.



Dictator/Transcriber
SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. SERVICING NOTES			3. MECHANICAL ADJUSTMENTS		25
Note for Repairing	3	4. ELECTRICAL ADJUSTMENTS		26
LCD Check Method	3	5. DIAGRAMS		
Microcomputer μ PD75308GF-496-3B9 (IC112)	4	5-1. Semiconductor Lead Layouts	30
2. GENERAL			5-2. Printed Wiring Boards	32
Features	10	5-3. Schematic Diagram	37
How to Use This Manual	10	6. EXPLODED VIEWS		
Precautions	10	6-1. Cabinet Section	41
Operation Flow Chart	11	6-2. Mechanism Deck Section (1)	42
Location and Function of Controls	12	6-3. Mechanism Deck Section (2)	43
Preparation	14	7. ELECTRICAL PARTS LIST		44
Dictation	15			
Transcription	19			
Erasing	21			
Alarm System	22			
Examples of Dictation and transcription	23			
Other Convenient Functions	24			

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

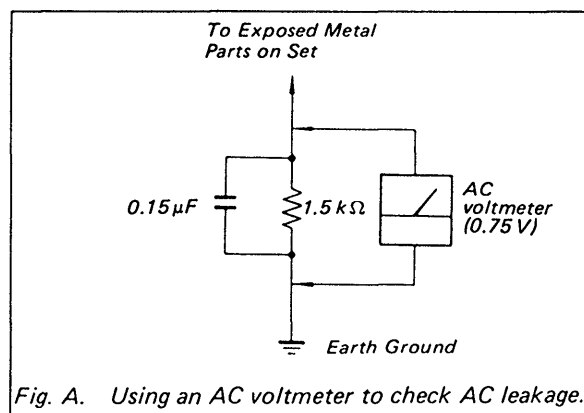


Fig. A. Using an AC voltmeter to check AC leakage.

SECTION 1 SERVICING NOTES

[NOTES FOR REPAIRING]

1. STANDBY ON (S101) Switch

The STANDBY ON switch is not a switch for turning ON/OFF the power source. Pay attention when repairing that the electricity is turned on even if the STANDBY ON switch is turned off.

- The states when turning off the STANDBY ON switch are as follows.

- a. LCD back light (EL901) will be turned off.
- b. LCD (ND901) display will be turned off.
- c. Motors (M901, 902) will be stopped.
- d. Plungers (PM901 to 903) will be turned off.

The above items from b to d are controlled by the microcomputer which makes the pin ③ of IC112 (microcomputer) become Low level.


2. IC Link (PS101)

Attention should be paid when repairing because the IC link is cut if the circuit is shortened by mistake.

3. Crack of Flywheel Gear and Cam Gear

Do not turn the flywheel counterclockwise.

The flywheel gear and cam gear may be crack when turn the flywheel counterclockwise.

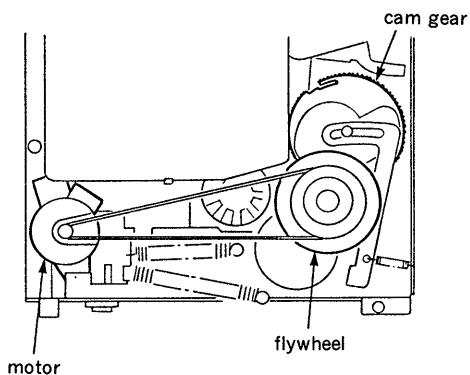

[LCD CHECK METHOD]

This unit has LCD all lighting mode to check LCD.

1. In order to perform LCD all lighting,






- Without inserting a cassette, press the three buttons of RESET, ERASE, SCAN at the same time.
LCD is all lighting.






2. In order to release LCD all lighting,

- Insert a cassette, or turn off the STANDBY ON switch once.

【MICROCOMPUTER μ PD75308GF-496-3B9 (IC112)】

1. Terminal Description

Pin No.	Pin Name	Usage	Voltage, Remarks												
1	S12	LCD segment output													
2	S13	LCD segment output													
3	S14	LCD segment output													
4	S15	LCD segment output													
5	S16	LCD segment output													
6	S17	LCD segment output													
7	S18	LCD segment output													
8	S19	LCD segment output													
9	S20	LCD segment output													
10	S21	LCD segment output													
11	S22	LCD segment output													
12	S23	LCD segment output													
13	KOUT 0	Key scan output													
14	KOUT 1	Key scan output													
15	KOUT 2	Key scan output													
16	KOUT 3	Key scan output													
17	MA50-OUT	Amplifier gain control output at MA-50 (micro cassette adaptor)	When using MA-50 : 5.3V When using the other : 0.1V												
18	——	Not used	Open												
19	4.8/2.4-OUT	Tape speed control output	At LISTEN of 4.8cm/s : 5.3V At the other : 0.2V												
20	——	Not used	Open												
21	COM 0	LCD common output													
22	COM 1	LCD common output													
23	COM 2	LCD common output													
24	——	Not used	Open												
25	LCD-BIAS	Output for LCD outer resistance	5.3V												
26	V _{LCD0}	Power source for LCD drive	2.4V												
27	V _{LCD1}	Power source for LCD drive	1.6V												
28	V _{LCD2}	Power source for LCD drive	0.8V												
29	FE-OUT	Fast-Erase control output	At Fast-Erase : 0V At the other : 5.9V												
30	BIAS-OUT	BIAS control output	At DICT, TEL-REC : 0V At the other : 5.9V												
31	BRK-PG-OUT	Brake plunger output	Normal : 6.0V STOP from FF/REW : 												
32	STOP-PG-OUT	Stop plunger output	Normal : 0V STOP from FWD : 												
33	VSS	GND	0V												
34	FWD-PG-OUT	FWD plunger output	At FWD : 5.9V At the other : 0V												
35	FF-M-OUT	} FF/REW motor output	<table><tr><td></td><td>At motor FF</td><td>At motor REW</td><td>At the other</td></tr><tr><td>Pin ㉔</td><td>0V</td><td>5.9V</td><td>5.9V</td></tr><tr><td>Pin ㉕</td><td>5.9V</td><td>0V</td><td>5.9V</td></tr></table>		At motor FF	At motor REW	At the other	Pin ㉔	0V	5.9V	5.9V	Pin ㉕	5.9V	0V	5.9V
	At motor FF		At motor REW	At the other											
Pin ㉔	0V	5.9V	5.9V												
Pin ㉕	5.9V	0V	5.9V												
36	REW-M-OUT														
37	A-OFF-OUT	Motor Auto-off output	Motor Auto-off (no cassette or after three minutes after STOP) : 1.9V At the other : 0V												
38	STAND-BY	Standby switch input	ON : 5.3V STAND-BY : 0V												


Pin No..	Pin Name	Usage	Voltage, Remarks											
39	TAB-IN	TAB (erase proof) detection switch input	Cassette with TAB : 0V, cassette without TAB : 5.3V Cassette or with MA-50 : 0V, without a cassette and without MA-50 : 5.3V With a cassette : 0V, without a cassette : 5.3V } Leaf switch of the mechanism deck											
40	MC-IN	MA-50 (micro cassette adaptor) or cassette half detection switch input												
41	CAS-IN	Cassette detection switch input												
42	SR	S reel signal input												
43	TR	T reel signal input												
44	DICT-IN	HU-DICT key input	At DICT key input of the hand control unit (HU-80) : 0V At the other : 5.3V											
45	LTR-DET	LTR/SEC signal input	Count the rectangular pulse with the microcomputer <table><tr><td></td><td>LTR</td><td>SEC</td></tr><tr><td>At LISTEN</td><td>60 to 160Hz</td><td>800 to 2000Hz</td></tr><tr><td>At FF/REW</td><td>600 to 4800Hz</td><td>8kHz to 60kHz</td></tr></table>				LTR	SEC	At LISTEN	60 to 160Hz	800 to 2000Hz	At FF/REW	600 to 4800Hz	8kHz to 60kHz
	LTR	SEC												
At LISTEN	60 to 160Hz	800 to 2000Hz												
At FF/REW	600 to 4800Hz	8kHz to 60kHz												
46	LTR-OUT	LTR/SEC signal output	At LTR oscillating :  5.3V Output 80Hz for three seconds. At SEC oscillating :  5.3V Output 1kHz for three seconds. At the other : 5.3V											
47	REC-OUT	DICT, TEL-REC control output	At DICT, TEL-REC : 5.0V At the other : 0V											
48	TEL-OUT	TEL-REC control output	At TEL-REC : 5.3V At the other : 0V											
49	ALM-OUT	Alarm output	At alarm oscillating :  5.3V 2.05kHz											
50	KIN 0	key scan input												
51	KIN 1	key scan input												
52	KIN 2	key scan input												
53	KIN 3	key scan input												
54	VDD	Positive power source terminal of the microcomputer	5.3V											
55	——	Not used	Connect to VSS											
56	——	Not used	Open											
57	NC	Not used	Connect to VDD											
58	X 1	Input for clock oscillation	 5Vp-p 4.19MHz											
59	X 2	Input for clock oscillation	 5.5Vp-p 4.19MHz											
60	HU-LIS-IN	HU-LISTEN key input	At LISTEN key-in of the hand control unit (HU-80) : 0.8V At the other : 5.3V											
61	BS-IN	HU-BS key input	At BS key in of the hand control unit (HU-80) : 0.8V At the other : 5.3V											
62	PB-OUT	Playback control output	At LISTEN : 5.3V At the other : 0V											
63	MUTE-OUT	Amplifier mute output	At LISTEN, DICT, TEL-REC : 5.3V At the other : 0V											
64	FS-IN	HU-FS key input	At FS key input of the hand control unit (HU-80) : 0.1V At the other : 5.3V											
65	PR-IN	Foot switch LISTEN key input	At LISTEN key input of the foot control unit (FS-75) : 0.1V At the other : 5.3V											
66	SEC-IN	HU-SEC key input	At SEC key input of the hand control unit (HU-80) : 0.1V At the other : 5.3V											

Pin No.	Pin Name	Usage	Voltage, Remarks
67	LTR-IN	HU-LTR key input	At LTR key input of the hand control unit (HU-80): 0.1V At the other : 5.3V
68	RESET	Microcomputer•reset input	Normal : 5.3V
69	S 0	LCD segment output	
70	S 1	LCD segment output	
71	S 2	LCD segment output	
72	S 3	LCD segment output	
73	S 4	LCD segment output	
74	S 5	LCD segment output	
75	S 6	LCD segment output	
76	S 7	LCD segment output	
77	S 8	LCD segment output	
78	S 9	LCD segment output	
79	S 10	LCD segment output	
80	S 11	LCD segment output	


2. LCD (ND901) Connection Diagram

* : The name of S12 is all the same because S12 is shortened on the printed board.

SEGMENT

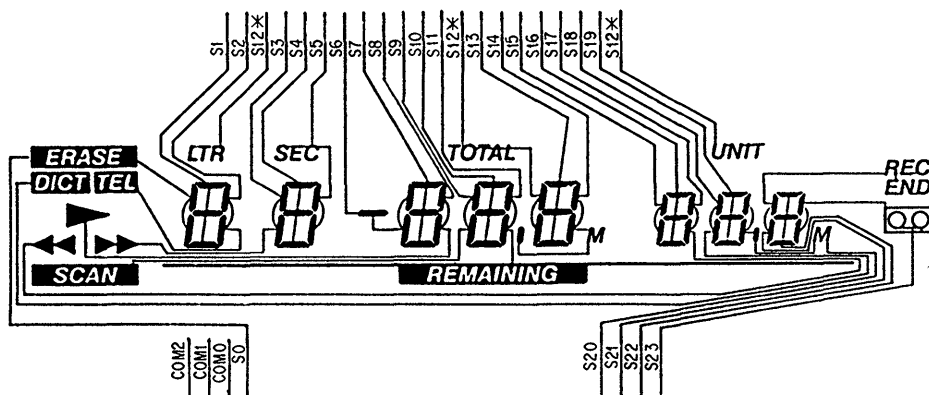

COMMON

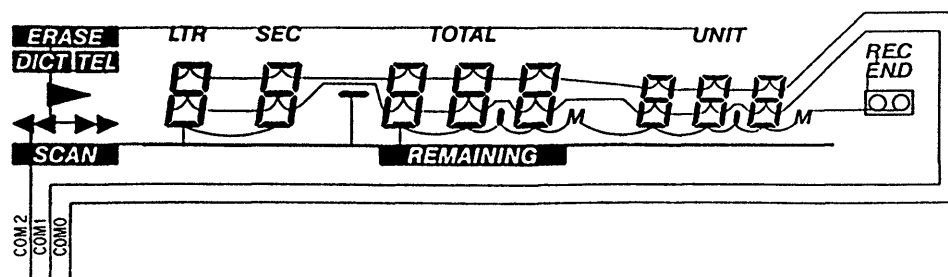


• LCD Check Method

This unit has LCD all lighting mode in order to check LCD.

- In order to perform LCD all lighting,
 - Without inserting a cassette, press the three buttons of RESET, ERASE, SCAN at the same time.
LCD is all lighting.
- In order to release LCD all lighting,
 - Insert a cassette, or turn off the STANDBY ON switch once.

3. LCD Display Map

*Segment output (S0 to 23)



IC112 Pin No.	Segment Name	COM 0	COM 1	COM 2
12	S23	Counter D0-b	Counter D0-c	
11	S22	Counter D0-a	Counter D0-g	Counter D0-d
10	S21	Counter D0-f	Counter D0-e	"REC END"
9	S20	Counter D1-b	Counter D1-c	"." (dot) and "M"
8	S19	Counter D1-a	Counter D1-g	Counter D1-d
7	S18	Counter D1-f	Counter D1-e	"DICT"
6	S17	Counter D2-b	Counter D2-c	◀◀ (REW)
5	S16	Counter D2-a	Counter D2-g	Counter D2-d
4	S15	Counter D2-f	Counter D2-e	(not used)
3	S14	Counter D3-b	Counter D3-c	"." (dot) of TOTAL and "M"
2	S13	Counter D3-a	Counter D3-g	Counter D3-d
1	S12	Counter D3-f	Counter D3-e	"TOTAL", "UNIT", "LTR" (short on the LCD block board)
80	S11	Counter D4-b	Counter D4-c	"REMAINING"
79	S10	Counter D4-a	Counter D4-g	Counter D4-d
78	S9	Counter D4-f	Counter D4-e	"SCAN"
77	S8	Counter D5-b	Counter D5-c	▶ (FWD)
76	S7	Counter D5-a	Counter D5-g	Counter D5-d
75	S6	Counter D5-f	Counter D5-e	■ (minus sign)
74	S5	Counter D6-b	Counter D6-c	"SEC"
73	S4	Counter D6-a	Counter D6-g	Counter D6-d
72	S3	Counter D6-f	Counter D6-e	▶▶ (FF)
71	S2	Counter D7-b	Counter D7-c	"TEL"
70	S1	Counter D7-a	Counter D7-g	Counter D7-d
69	S0	Counter D7-f	Counter D7-e	"ERASE"

- The pin name of the microcomputer (IC112) and the LCD segment name are the same.

4. Key•Scan•Matrix

The pin No. and the pin name stand for those of the microcomputer (IC112).

Input \ Output		(Pin No.) 13	14	15	16
		(Pin Name) KOUT 0	KOUT 1	KOUT 2	KOUT 3
(Pin No.) 50	(Pin Name) KIN 0	RESET (S110)	ERASE (S109)	TEL REC (S108)	SCAN (S107)
51	KIN 1	FF (S114)	REW (S113)	LISTEN (S112)	STOP (S111)
52	KIN 2	REVERSE TIME			
		(Pin ① of S106)	(Pin ② of S106)	(Pin ③ of S106)	(Pin ④ of S106)
53	KIN 3	not used	not used	AUTO STOP (S104)	TAPE SPEED (S102)

- Hard is controlled by Low active (Low is input with turning on each switch.)


TAPE SPEED is 4.8cm/s at Low.

AUTO STOP is turned "ON" at Low.


Refer to the following figure for the key matrix of S106.

S106 position ○: ON

	0	1	2	3	4	5	6	7	8	9
Between C and 1	○		○		○		○		○	
Between C and 2		○	○			○	○			
Between C and 3					○	○	○	○		
Between C and 2									○	○

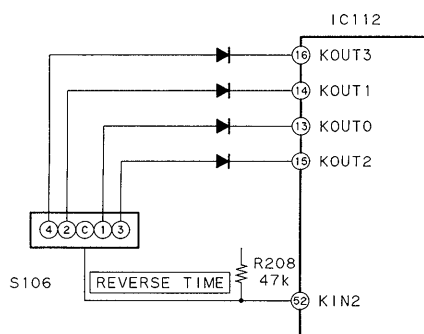

- Key•scan is controlled by Low active.

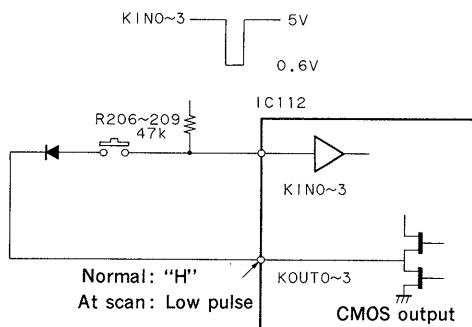

5. Detection of T and S Reel


Pin ⑬ of IC112: T reel }
 Pin ⑭ of IC112: S reel }

Waveform condition:


- Tape C-90 is used.
- The period is different by the tape position.

FWD:

T reel at the tape TOP }
 S reel at the tape END }

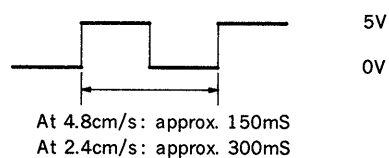


S reel at the tape TOP }
 T reel at the tape END }

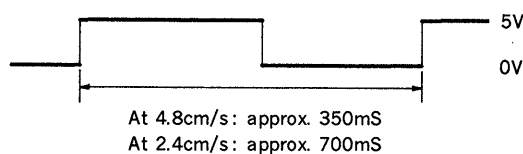


FF/REW:

T reel at the tape TOP }
 S reel at the tape END }

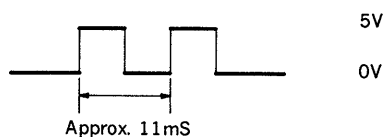

S reel at the tape TOP }
 T reel at the tape END }

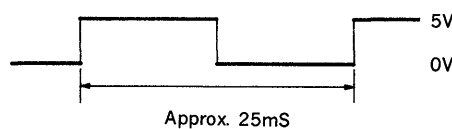

* The speed of FF and REW is the same when the tape speed switch is 4.8cm/s or 2.4cm/s.


Features

The Sony BM-88 dictator/transcriber is designed to be used for both dictation and transcription.

The Sony BM-77 transcriber is designed to be used only for transcription.

As a dictator (BM-88 only)


- The Sony HU-80 hand control unit (optional) remotely controls the BM-88 dictator/transcriber.
- Dual electronic indexing function signals—"LTR" (end of letter) and "SEC" (special instructions to secretary) signals—can be recorded on a tape during dictating, recording of telephone calls, listening or in the stop mode.
- The end of the last recorded segment on the tape can easily be located using the record-end function.
- Alarm sound and indication on the display window informs recording error.
- Recording of telephone calls can be performed with the use of the optional TL-2 message coupler.
- With the use of the optional DE-35, DE-36 or MDR-U10M earphones, you can monitor the sound with the desired sound level during recording.

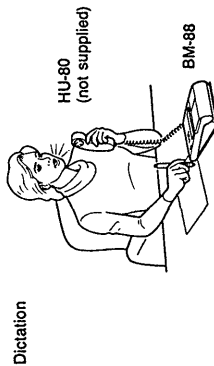

Dictation

As a transcriber

- The scanning function allows easy display of the total recorded time of dictation in minutes, the number of documents and instructions recorded on the tape.
- Auto-stop function quickly accesses instructions and documents.
- VSC (Variable Speech Control) enables rapid and easy-to-listen-to playback. (BM-88)
- Auto backspace function with the REVERSE TIME control makes transcribing easy by enabling the reviewing of the last recorded words each time listening is resumed.
- Two tape speeds (4.8 cm/sec. and 2.4 cm/sec.) can be selected according to the user's needs.
- Rapid erasing function with ERASE and REW buttons.
- Microcassette transcription is possible with the use of the optional MA-50 microcassette adaptor.

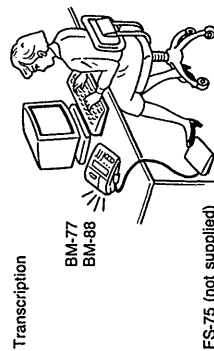

Transcription

How to Use This Manual

This instruction manual covers two models, BM-77 and BM-88. The differences in the models will be clearly described in this manual. If you have the model BM-77, please skip pages 19 to 26, 33 to 41 and page 53.

Most of the illustrations used in this manual are those of the BM-88.

Precautions

- Operate the unit only on 9 V DC.
- For AC operation, use the AC power adaptor supplied with this unit. Do not use any other AC power adaptor as it may cause malfunction.
- Unplug the AC power adaptor from the wall outlet when it will not be used for an extended period of time. To disconnect the adaptor, pull it out by grasping the adaptor. Never pull it by the cord.
- Do not install the unit in a location near heat sources such as radiators or airducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit near materials (curtains, draperies) that may block the ventilation holes.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- The AC power adaptor which has been supplied becomes hot if it is connected to an AC outlet for a long period of time. But, this will not cause any trouble.

If you have any question or problem concerning your unit that is not covered in this manual, please consult the Sony dealer from whom you purchased the unit.

SECTION 2 GENERAL




This section is extracted from instruction manual.

Operation Flow Chart



For details, refer to the pages in ●.

□: Necessary step □: Optional step

Dictation (BM-88 only)


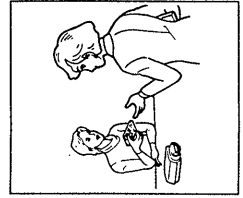
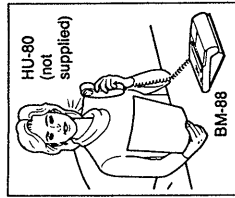
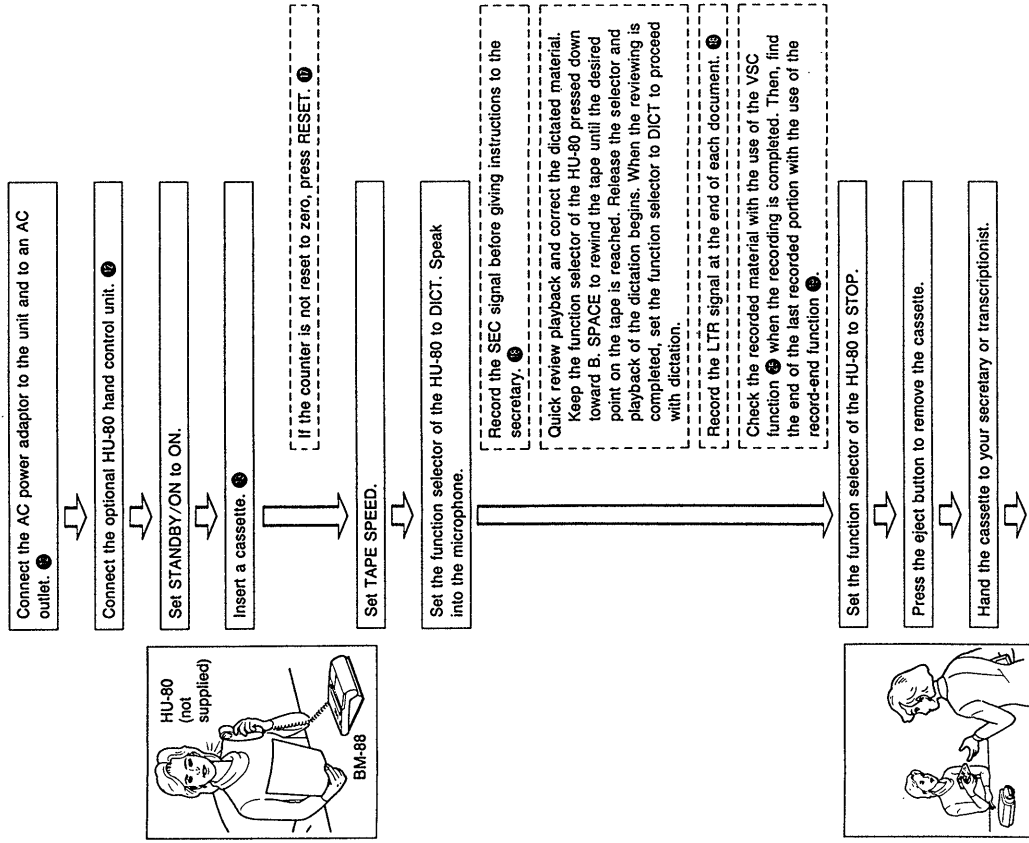


Transcription (BM-77/BM-88)

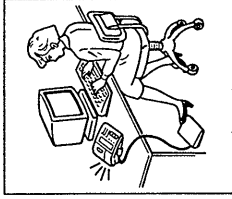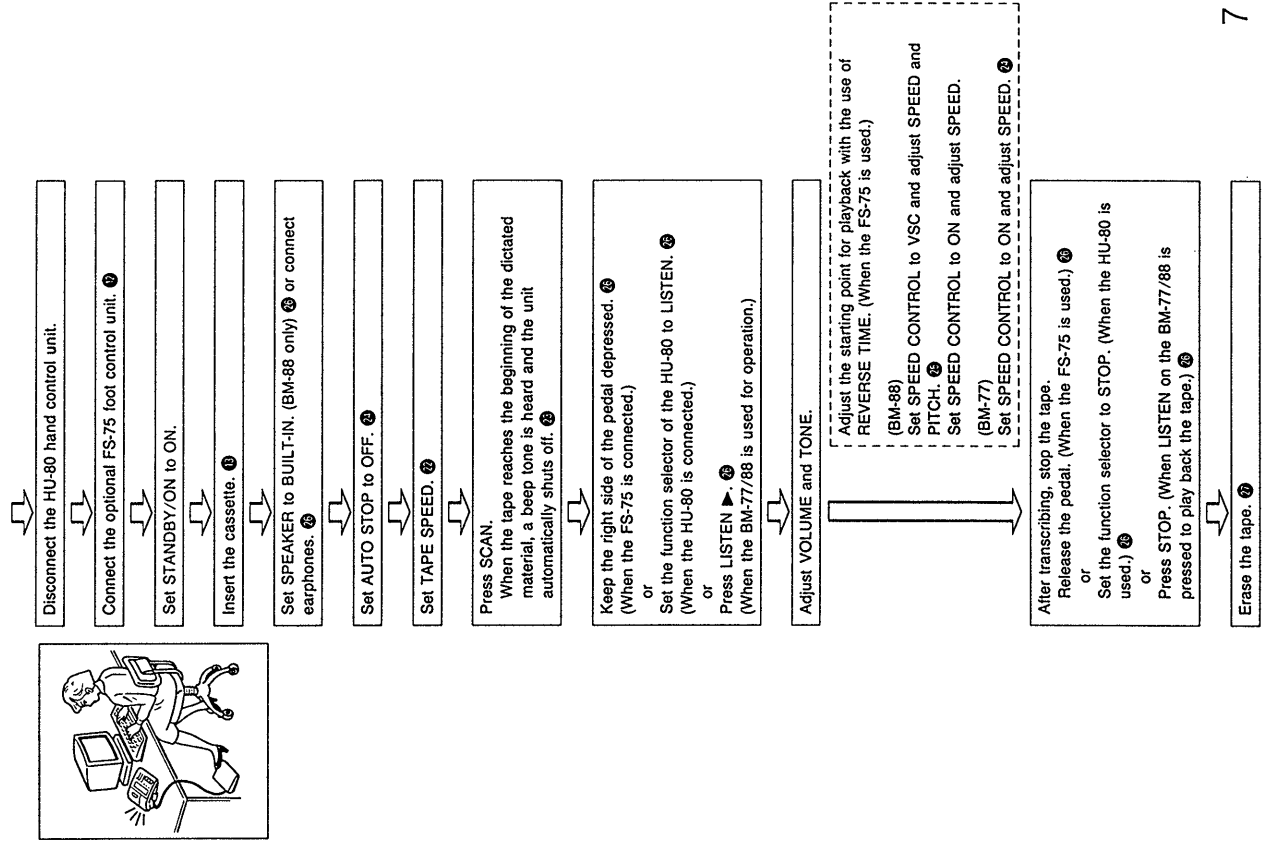

Location and Function of Controls

For details, refer to the pages indicated in ●.

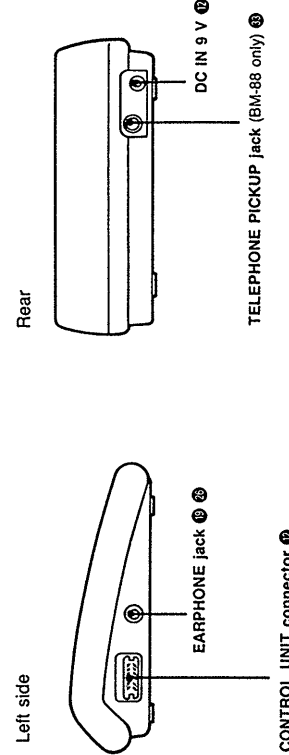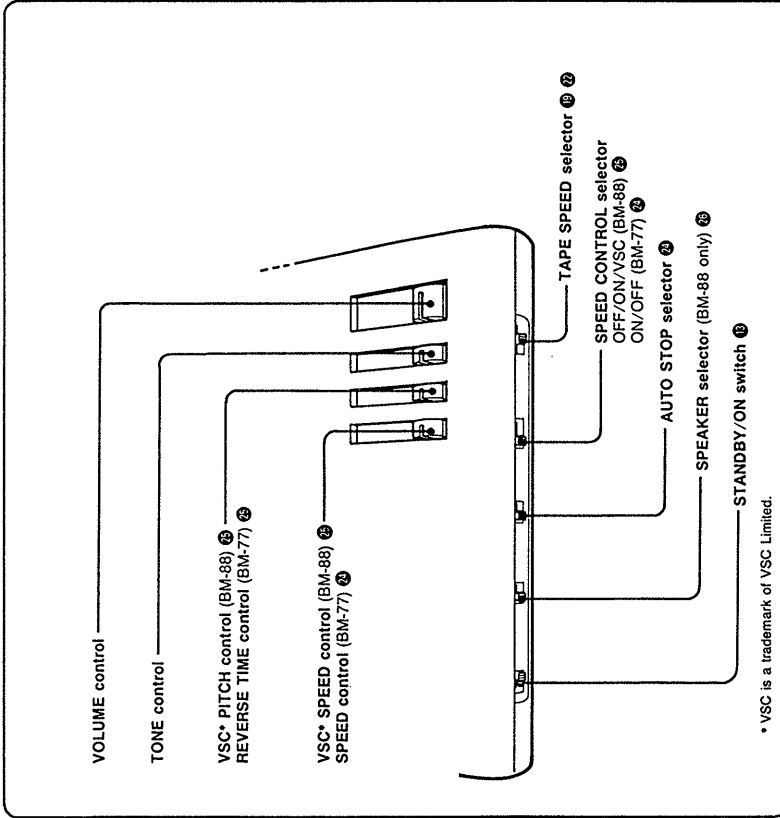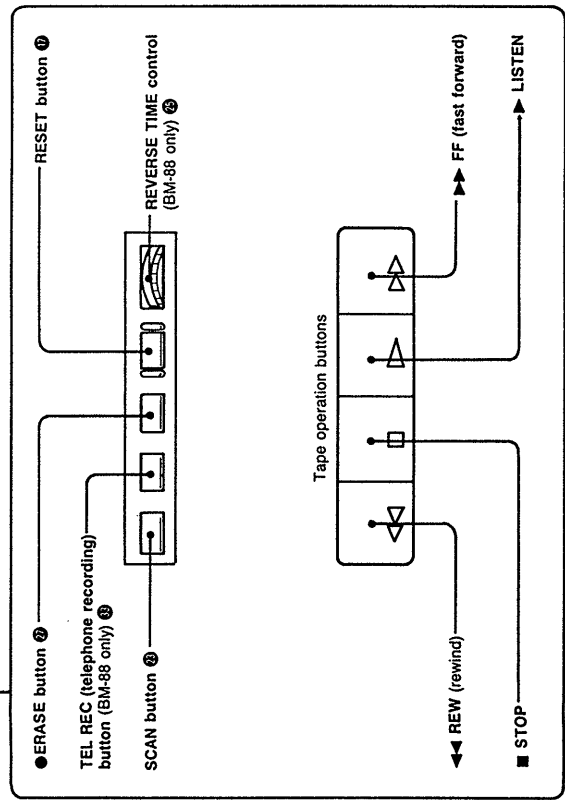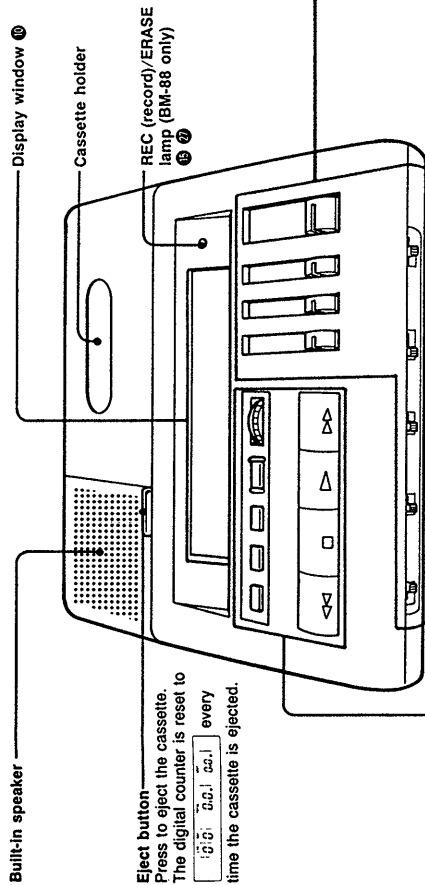

Location and Function of Controls

Display window

SEC (secretary) Special instructions for secretary counter

Displays the number of special-instructions-for-secretary signals recorded.

LTR (letter) End of letter counter

Displays the number of end-of-letter signals (i.e. the number of documents) recorded.

TEL (telephone) recording indicator Displayed during recording of telephone calls.

ERASE indicator Displayed while the cassette is being erased.

DICT (dictation) indicator Displayed during recording.

▶ **(listen) indicator** Displayed during playback.

◀◀ **(rewind) indicator** Displayed while the cassette is being rewound.

SCAN indicator Appears when the SCAN button is pressed
While SCAN is displayed, REMAINING is also displayed. In this case, the display window indicates the remaining time of the recorded LTR and SEC signals and the remaining time of the actual document. This disappears with a long beep tone when the tape reaches the tape top.

▶▶ **(fast forward) indicator** Displayed while the tape is advanced rapidly.

TOTAL (time/tape) counter Displays time or tape length of the recorded documents.
The time counter and the tape counter is switched by pressing the RESET button for more than two seconds.

Time counter
TOTAL 0.0 M

Indicates the approximate time of the recorded documents.

Tape counter
TOTAL 000

Indicates the tape length of the recorded documents.

UNIT (time) counter Displays the time of each recorded document, i.e. displays the approximate recorded time of a dictation, from the portion where the LTR signal is recorded to the portion where the next LTR signal is recorded.

REC END indicator Blinks for approx. three seconds when the recording end portion is detected and disappears.

REMAINING indicator Displayed while cassette is inserted.

The indicator blinks in the following cases:

- The button is pressed when no cassette is inserted or when the cassette's safety tabs have been removed.
- About 3 minutes before reaching the end of the tape.
- End of tape or the tape is torn.

REMAINING indicator Appears when the SCAN button is pressed. While REMAINING is displayed, recordings of dictation, telephone calls, LTR signals and SEC signals cannot be made. If the function selector is set to DICT or TEL REC (BM-88 only), LTR or SEC button is pressed, REMAINING blinks and a beep tone is heard.

The numbers on the digital counter (LTR, SEC, TOTAL and UNIT) indicate the remaining number of the LTR signals and the SEC signals, remaining amount of dictations (TOTAL) and remaining time of the actual document while the unit is in playback, fast forward or rewind mode.


To clear the REMAINING mark, press RESET or the eject button.

Notes

- It may be difficult to read the liquid crystal counter display due to the watching angle.
- The counter reading may work incorrectly if a music cassette or a monaural recorded cassette is played back.


Preparation

Power Connection

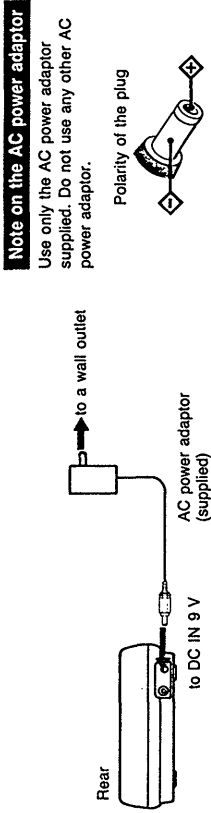


Connecting the HU-80 Hand Control Unit (not supplied) (BM-88 only)

For operation, refer to "Dictation" on page 6.

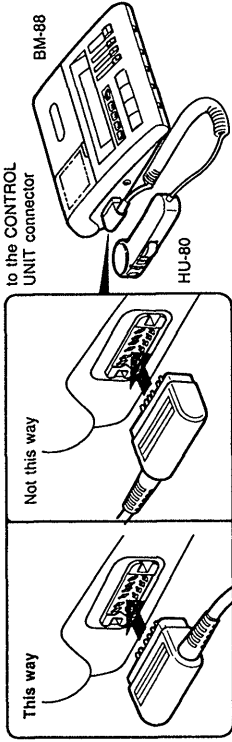


Attaching the cradle

Attach the supplied cradle with the HU-80 to the left or right side of the unit. Place the HU-80 hand control unit on the cradle while not in use. Insert the cradle into the slots and slide to secure it.

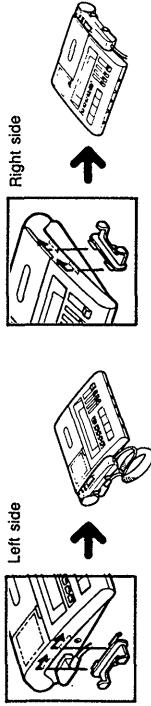


Connecting the FS-75 Foot Control Unit (not supplied)


For operation, refer to "Transcription" on page 2.

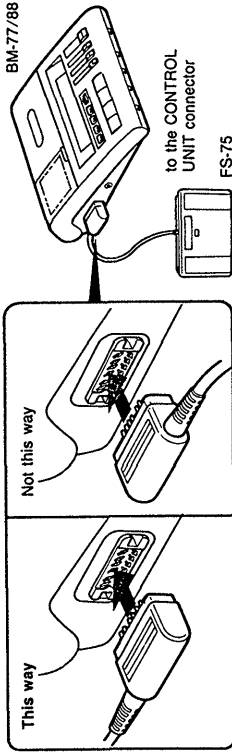

Cassette Insertion

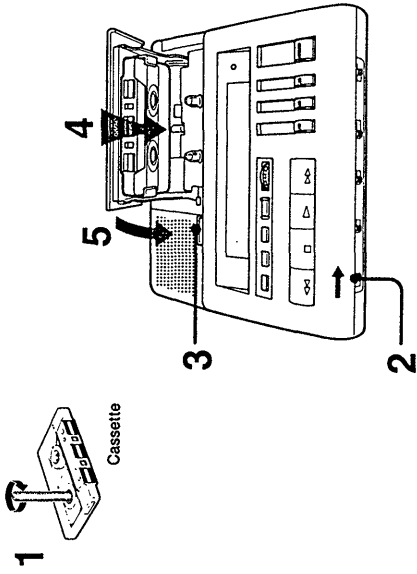

- 1 Take up any slack in the tape.
- 2 Set STANDBY/ON to ON.
- 3 Press the eject button to open the cassette holder.
- 4 Insert a cassette into the cassette holder with the side to be recorded on or played back facing upward.
- 5 Close the cassette holder.
The digital counter displays zero and 00 appears.



Preparation

■ Notes on cassettes

- Any standard cassette can be used, but the optional Sony leaderless cassette DC-60 or DC-90 is recommended. The use of the chromium dioxide or metal type of cassette is not advisable.
- Choose a cassette of suitable length. Recording time of each side of these cassettes (at 4.8 cm/s) is as follows:
DC-60 Approx. 30 minutes
DC-90 Approx. 45 minutes
- We do not recommend the use of cassettes with a running time of longer than 90 minutes.
- The letter A on the Sony cassette is embossed to help you distinguish that side of the cassette in a dimly lit area.

To prevent accidental erasure

When the BM-88 is operated in record mode, previous recordings are automatically erased.


For this reason, cassettes incorporate a safety device to prevent accidental erasure. When the small tabs at the rear of a cassette are broken out, an interlock on the BM-88 will be activated, preventing recording.

To protect side A recording, break out the tab of that side.

For the protection of side B, break out the tab of that side.

When the cassette is installed for telephone recording with the tabs broken out, the TEL REC button does not operate.

When the cassette is installed for dictating with the tabs broken out, recording cannot be attempted, but the alarm sound is heard.

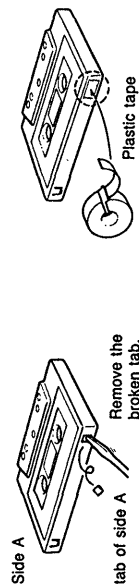


To reuse a cassette for recording after the tabs have been removed, simply cover each slot with a small piece of plastic tape. Do not stick any material on any part of the cassette except the circled portions, as shown.

Dictation (BM-88 only)


To use the unit as a dictating machine, connect the HU-80 hand control unit (not supplied). For connection, see page 15.

Operation

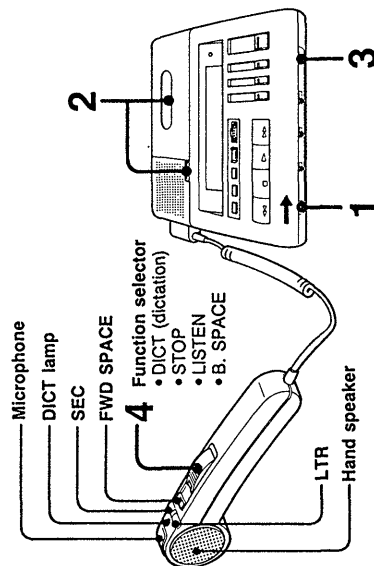

HU-80 (not supplied)

- 1 Set **STANDBY/ON** to **ON**.
- 2 Insert a cassette. (See page 14.)
- 3 Set **TAPE SPEED** to the desired tape speed, 4.8 or 2.4 (cm/sec.).
- 4 Set the function selector to **DICT**.
Recording starts. Speak into the microphone.
DICT appears on the display window.
The DICT lamp on the hand control unit lights up and REC/ERASE lamp on the BM-88 blinks when the microphone picks up sound.




To stop the tape
Set the function selector to **STOP**.

Note

Keep the HU-80 away from the BM-88 during recording. If not, noise may be recorded.


Dictation (BM-88 only)

Digital Counter

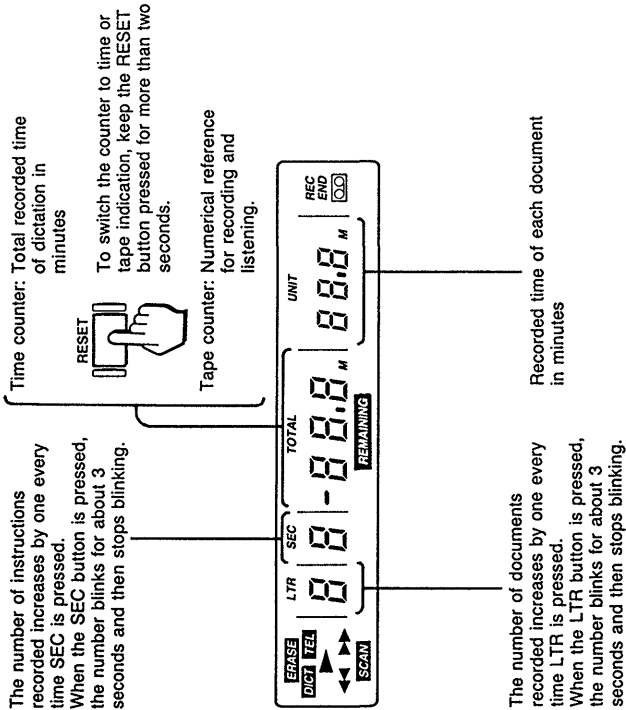


■ To set the digital counter to zero

We recommend that you press the RESET button before starting dictation. Keep the RESET button pressed for more than 0.5 second to reset the LTR (document), SEC (special instruction), TOTAL (time/tape), and UNIT (time) counters to zero.




■ To reset the TOTAL (time/tape) counter to zero tape counter

When the RESET button is pressed for more than 2 seconds in the tape stop mode, the TOTAL (time/tape) counter changes to 000 and functions as a tape counter.



■ To reset the TOTAL (time/tape) counter to zero time counter

Keep the RESET button pressed for more than 2 seconds.



The TOTAL (time/tape) counter and the UNIT time counter indicate the approximate time of the recorded material.

Notes

- The time counters are normally within plus or minus two minutes of the actual time when using a DC-90 cassette.
- In case a cassette other than DC-60 and DC-90 is used, the time counter reading may differ to a larger extent from the actual time.
- The tape counter is switched to the time counter when the SCAN button is pressed.
- The numbers on the digital counter are memorized even when the STANDBY/ON switch is turned off.

Dictation (BM-88 only)

Convenient Functions

To record LTR (letter) and SEC (secretary) signals

You can record electronic index signals on the tape while the unit is set in recording (dictation), telephone recording, stop or playback (with the HU-80) mode.


LTR (letter = end of document) signal: Record at the end of each document.
SEC (secretary = special instructions to secretary) signal: Record before giving instructions to the secretary.

When the AUTO STOP function (page 29) is activated (AUTO STOP: ON), the tape automatically stops at each index signal when it is rewound, rapidly advanced or scanned. Documents and instructions can be located without the user's having to listen to the entire tape.

Before dictating, press RESET to reset the counters to zero.


To record the LTR signal

Press LTR on the HU-80.
Each time the button is pressed, the number on the LTR (document) counter increases by one.

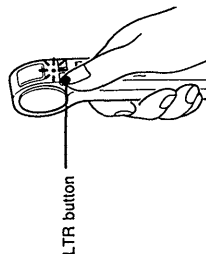

To record the SEC signal

Press SEC on the HU-80.
Each time the button is pressed, the number on the SEC (special instruction) counter increases by one.

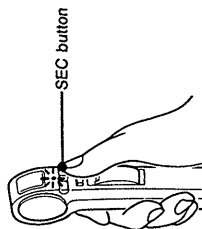


When the LTR or SEC signal is recorded, the number on the counter blinks and then lights up. Up to nine signals each can be recorded on each side of a cassette. If more than nine signals are recorded, "E" appears in the counter display.

Notes

- The LTR or the SEC signal should be recorded with the intervals of more than 6 seconds.
- If the LTR or the SEC button is pressed while winding the tape rapidly (FF or REW), an alarm may sound continuously. In this case, stop the tape motion and wind the tape rapidly again.
- Playback sound is muted when either the LTR or SEC button is pressed.
- If either the LTR or SEC button is pressed while turning on the SPEED CONTROL selector, the tape will run at normal tape speed.
- While playing back, if either the LTR or SEC button is pressed to record the index signal on the previously recorded LTR or SEC signal by mistake, a beep tone is heard and the index signal cannot be recorded.

Record-end function

You can easily find the end of the last recorded segment on the tape. This function enables you to continue recording from the point where you left off.

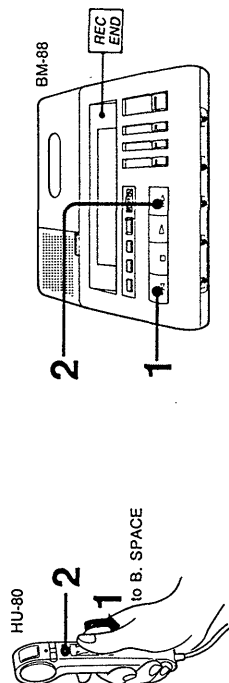

- 1 Rewind the tape a little.
- 2 Press ►► FF (FWD SPACE).

The tape will rapidly advance and stop at the end of the last recorded segment. At the end of the last recording, a long beep tone is heard and REC END blinks for approx. 3 seconds on the display window and then, disappears.
If the unit is set in record mode by mistake, immediately stop the recording. The record-end function does not operate if the recorded material is shorter than a second.
Once the cassette is ejected or the STANDBY/ON switch is set to STANDBY, the record-end memory is cleared and the record-end function does not operate.


Recording time

Possible recording times of each side of cassettes are as follows.

Cassette	TAPE SPEED selector	
	4.8	2.4
Sony DC-60	30 minutes	60 minutes
Sony DC-90	45 minutes	90 minutes

Monitoring while dictating


The recording can be monitored through earphones. Connect a Sony DE-35, DE-36 or MDR-U10M earphones (not supplied) to the EARPHONE jack located on the left side of the unit. Adjust VOLUME if required.

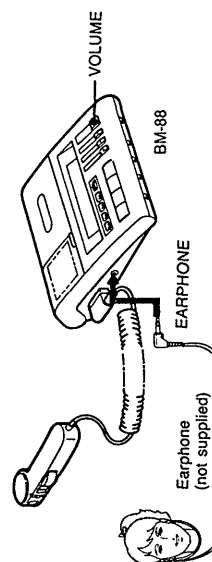


Dictation (BM-88 only)

- **Quick reviewing (playback)/correcting the dictated material**
You can easily listen to the dictated material and correct it if required.

- 1** Keep the function selector of the HU-80 pressed down toward B. SPACE to rewind the tape.
- 2** Release the selector. Playback of the dictation begins.
- 3** When the reviewing is completed, set the function selector to DICT to proceed with the dictation.

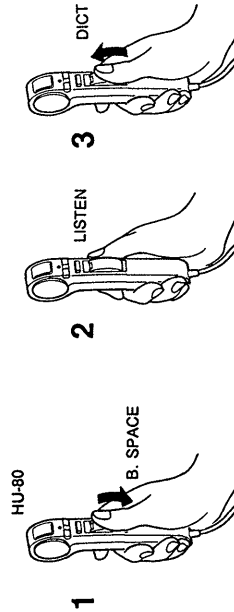

For fast winding of the tape, keep the FWD SPACE button of the HU-80 pressed until the desired portion is reached.

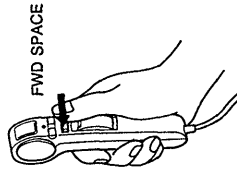

- **When you have finished dictating**
Hand the cassette to your secretary without rewinding the tape.

Tips for More Efficient Dictation

Before you start dictation

- Organize your thoughts.
- Make notes or an outline of what you want to dictate.
- Check that the cassette is erased. (See page 20.)

When you dictate

- Identify yourself. (Name, department, phone number)
- Indicate the type of dictation. (Memo, letter, etc.)
- Give transcribing instructions. (Type of stationery, number of copies and who they are for, envelopes, etc.)
- Specify distribution (Names, addresses, etc.)


During dictation

- Relax and speak clearly, at normal speed.
- Short sentences are best.
- Include punctuation.
- Spell difficult or unusual words.
- Correct your mistakes. (Review and redictate, or use SEC signal to alert the transcriptionist of changes or corrections.)
- At the end of each document, record an LTR signal.

Transcription (BM-77/BM-88)

To use the unit as a transcribing machine, connect the FS-75 foot control unit (not supplied).
For connection, see page ⑦.

Operation

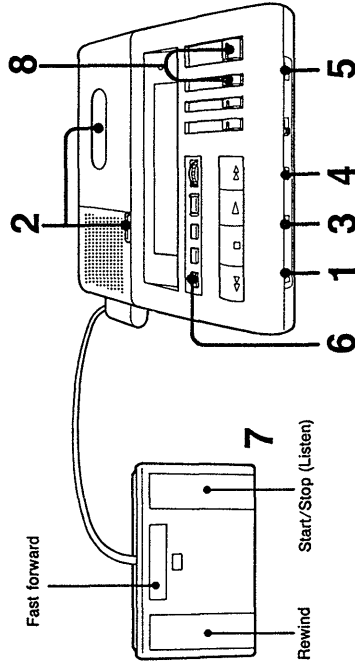

- 1 Set **STANDBY/ON** to **ON**.
- 2 Insert a cassette. (See page ⑤.)
- 3 Set **SPEAKER** to **BUILT-IN**. (BM-88 only)
- 4 Set **AUTO STOP** to **OFF**. (See page ④.)
- 5 Set **TAPE SPEED** to the same tape speed as that used for recording (dictation).

To stop the tape
Release the pedal.

To rewind the tape
Keep the left side of the FS-75 pedal depressed.


To rapidly advance the tape
Keep the center top of the FS-75 pedal depressed.

6 To check the recorded material by using the **SCAN** function:

Press **SCAN** for a second.
SCAN and **REMAINING** appear on the display and the tape starts to be rewind.

When the tape reaches the beginning of the dictated material, a beep tone is heard and the unit automatically shuts off. When the tape is completely rewind, the total dictated time and the recorded time of the first document are displayed. The numbers of documents and special instructions recorded on the tape are also displayed on the display.

Disappears when the unit shuts off.



While **REMAINING** is displayed, the numbers on the display window indicate the amount of tape left. This is convenient to know the remaining amount of dictation when transcribing.

While **REMAINING** is displayed, dictating, telephone recording and recording of LTR and SEC signals cannot be performed.
Press **RESET** or the eject button. **REMAINING** will disappear.

When the tape reaches the tape top, this mark blinks while a long beep tone is heard and then lights up.

The above example of the counter indicates that the cassette has 2 documents and 3 special instructions. Total recorded time of the dictation is approx. 5.4 minutes and the recorded time of the first document is approx. 2.1 minutes.

Notes

- To stop scanning, press **STOP**.
- When the **AUTO STOP** switch is set to **ON**, the tape automatically stops at each electronic index signal previously recorded on the tape while scanning. This is convenient to locate the beginning of each document or special instruction.
- To restart scanning after it is stopped at the electronic index signal, press the **SCAN** or **REW** button.

- 7 Keep the right side of the **FS-75** pedal depressed to listen to the tape.
- 8 Adjust **VOLUME** and **TONE**.

As to the display window, refer to page ⑤.

Transcription

Notes on the time counter

While REMAINING is displayed (in scanning mode or in rewind mode after scanning) and the unit is stopped automatically when the LTR signal is detected, the number on the UNIT counter will be reset to 0.0 M after blinking for about 3 seconds to read the amount of the document.

Scan-top function

When the tape is advanced rapidly (in fast forward mode after scanning) while REMAINING is displayed, the tape will stop automatically at the portion from which the scanning was started. In this case, a beep tone is heard and the — (minus) mark on the TOTAL counter blinks for about 3 seconds and then stops blinking.

Convenient Functions

■ AUTO STOP function

With the AUTO STOP function, recorded documents and instructions can be located without the user's having to listen to the entire tape.

This function activates only in rewind, fast forward or scanning mode.

When the AUTO STOP switch is set to ON, the tape automatically stops at each electronic index signal previously recorded on the tape. (See "To record LTR and SEC signals" on page 19.)

When an LTR signal is detected, the LTR document counter number increases or decreases and blinks for approximately 3 seconds, and a beep tone is heard. The tape stops automatically.

When the SEC signal is detected, the special instruction counter number increases or decreases and blinks for approximately 3 seconds, and a beep tone is heard. The tape stops automatically.

When the AUTO STOP switch is set to OFF, the numbers on the LTR (document) and SEC (special instruction) counters increase or decrease and blink when an LTR or SEC signal is detected, but the tape does not stop.

Note

The tape does not stop at the LTR or the SEC signal even if the AUTO STOP switch is set to ON while the FF or REW button is continuously depressed.

■ VSC (Variable Speech Control)

The tape can be played back at a speed faster than normal without distorting the voice. Set the SPEED CONTROL selector* to VSC and adjust both the SPEED and PITCH controls. Set the SPEED CONTROL selector to ON to adjust the SPEED control only.

When the SPEED CONTROL switch is set to OFF, the tape moves at the normal speed regardless of the position of the SPEED and PITCH controls.



* Tape speed can be changed in the range of approximately -20% to +80% with the use of the SPEED control.

■ Auto backspace function

This control operates only when the FS-75 foot control unit is connected.

With the use of the REVERSE TIME control, the tape is rewound a little each time it is stopped. Then, the last few recorded words can be reviewed when you resume listening. Adjust the REVERSE TIME control to determine the length of tape to be rewound.

At "9" position, the tape is rewound so that the dictated material can be reviewed for about 5 seconds. At "0" position, the tape stops without being rewound at all.

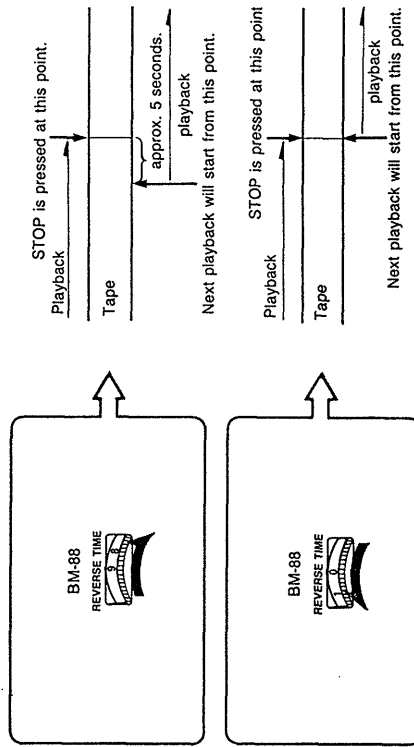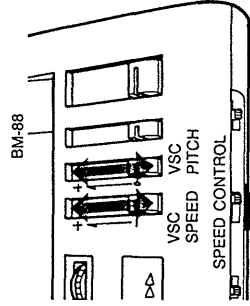

Set the REVERSE TIME control to the desired position and keep the right side of the pedal depressed to listen to the tape.

Transcription

Tape transport operation

	BM-77 BM-88	HU-80 (for BM-88 only)	FS-75
Rewind	Press ◀◀ REW.	Keep the function selector pressed down toward B. SPACE.	Keep the left side of the pedal depressed.
Stop	Press ■ STOP.	Set the function selector to STOP.	Release the pedal.
Listen	Press ▶▶ LISTEN.	Set the function selector to LISTEN.	Keep the right side of the pedal depressed.
Fast forward	Press ▶▶▶ FF.	Keep the FWD SPACE button pressed.	Keep the top center of the pedal depressed.

Notes

- When a button is pressed while detecting the index signal during playback, the switching time of the operation modes may be delayed and a beep tone is heard. (See page 29.)
- When a music cassette or a monaural cassette is wound rapidly (in fast forward or rewind mode), the switching time of the operation modes may be delayed.

Private listening

Connect a Sony DE-35, DE-36 or MDR-U10M earphones (not supplied) to the EARPHONE jack.
The sound will be heard through the earphones and speaker sound will be disconnected.

Selecting the speaker (BM-88 only)

You can listen to the dictated material through the built-in speaker or the speaker on the HU-80 by switching the SPEAKER selector to BUILT-IN or HAND.



Notes


- E-INDEX signal of the Sony conventional models BM-12, BM-17, BM-18 and so on corresponds to the LTR signal of the models BM-77 and BM-88.
- LTR/SEC signals and E-INDEX signal do not correspond to the cue signals used for consumer type tape recorder.

Tips on Transcription

- Before typing, check the recorded time of the dictation and the number of LTR and SEC signals recorded on the cassette using the SCAN function.
- Erase the tape when transcription is finished.

Erasing

The recording can be erased rapidly.

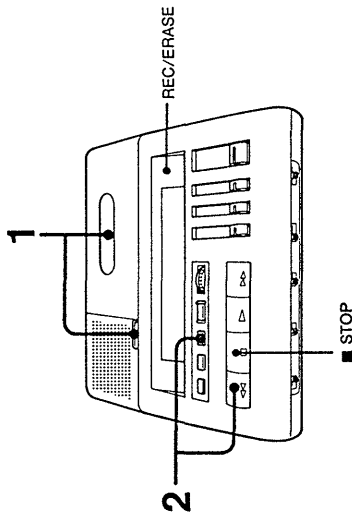


1 Insert the cassette with the side to be erased up.

Be sure not to rewind the tape after transcribing. The end portion of the dictated material to be erased should be positioned at the recording head.

2 Keep ERASE pressed and then press ◀◀ REW.

The REC/ERASE lamp lights up (BM-88 only) and ERASE appears on the display window. The portion of the tape being rewind is erased.


















To stop the tape
Press ■ STOP.

For easier and quicker erasure of the entire cassette, use Sony BE-9H cassette eraser (not supplied).

Alarm System

An alarm sounds and an indication appears on the display window in the following situations.

Alarm system	Situation	To release alarm system
When you press a button,   Blinks.	<ul style="list-style-type: none"> No cassette is inserted. The cassette's safety tabs have been removed. 	First, release the button, then <ul style="list-style-type: none"> Insert a cassette. Insert a new cassette or cover the safety slot.
The unit shuts off.   Blinks.	End of tape The tape is torn	Rewind the tape. Insert a new cassette.
When you press a button,   Blinks.	When you attempt to record while REMAINING is displayed. (BM-88 only)	Clear the REMAINING mark by pressing the RESET or eject button.
While recording,   Blinks.	Approx. 3 minutes before the end of tape while recording. (BM-88 only)	Press  LISTEN to stop alarm sound. Stop recording and insert a new cassette.
The unit shuts off during FF mode.   Blinks.	End of recording. (BM-88 only)	The REC END disappears and alarm stops automatically when about 3 seconds have passed.
"E" appears.	The number of LTR or SEC signal exceeds 9.	Do not press LTR or SEC button more than 9 times.

Alarm system	Situation	To release alarm system
The unit shuts off during FF mode. The — (minus) mark on the TOTAL counter blinks. 	While REMAINING is displayed, the unit is rapidly advanced and automatically stopped at the portion from which the scanning was started.	The minus mark stops blinking and lights up automatically when about 3 seconds have passed.
The unit shuts off.  Number of LTR or SEC blinks.	Either LTR of SEC are detected while the tape is wound rapidly (in fast forward, rewind or scanning mode) and the AUTO STOP switch is set to ON.	The number of LTR or SEC stops blinking and lights up automatically when about 3 seconds have passed.
When you press a button while playing back the tape, 	Either the LTR or SEC signals are detected on the tape.	Although the switching time of the operation modes may be delayed, the button is memorized and the unit operates within a second.
Either the LTR or SEC buttons are pressed while playing back the tape, 	Either the LTR or SEC signals are detected on the tape. (BM-88 only)	Release the button. Play back the tape continuously for more than 6 seconds and then, press the button again.

Examples of Dictation and Transcription

Example of Dictation (BM-88 only)

Set the function selector of the HU-80 to DICT.



Press SEC.

"This is a letter. Type it up and send it by express."

"Today's date is August 17, 1990.

This letter is for Mr. Alan R. Jefferson
Pyrene House, Sunbury on Thames,
Middlesex, TW16 7AT, U.K.

Dear Sir,
We received your order for"



Press SEC.

"under line
POL-L-5049-D3581", "quantity 270,000 today.
Shipment can be made within two weeks by Air.
Please accept our thanks for your order.

Faithfully yours,
John S. Smith
Sales Manager
U.K.G. Ltd."



Press LTR.



Set the function selector of the HU-80 to STOP.

Example of Transcription

Insert the cassette.



Set AUTO STOP to OFF.



Press SCAN.

The unit automatically shuts off when the tape
reaches the tape top.

The counter indicates the total amount of
dictation.



Keep the right side of the FS-75 pedal
depressed.

Tape playback starts.



Mr. Alan R. Jefferson
Pyrene House, Sunbury on Thames,
Middlesex, TW16 7AT, U.K.

Dear Sir,
We received your order for POL-L-5049-D3581, quantity
270,000 today. Shipment can be made within two weeks
by Air.

Please accept our thanks for your order.

Faithfully yours,

John S. Smith
Sales Manager
U.K. G. Ltd.

JSS/hh

August 17, 1990

Blinks for approx. 3 seconds
and stops blinking.

Blinks for about 3 seconds and
then stops blinking.

Blinks for approx. 3 seconds
and stops blinking
The number is reset.




Stop the tape when the transcription is finished.

If desired, keep ERASE pressed and then, press ◀◀ REW to erase the cassette.

Other Convenient Functions

Transcribing a Microcassette

With Sony MA-50 microcassette adaptor (not supplied), transcription from a microcassette is possible.

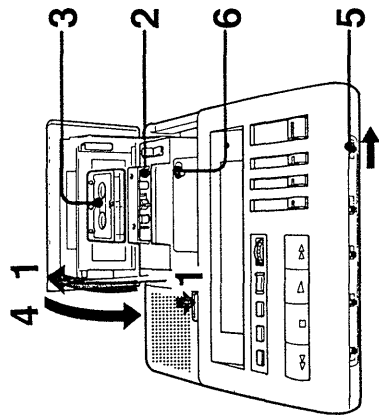

- 1 Press the eject button to open the cassette compartment and press the cassette holder in the direction of the arrow to further open the compartment.
- 2 Install the MA-50 microcassette adaptor in the cassette compartment.
For details, refer to the instruction manual of the MA-50.
- 3 Insert a microcassette in the MA-50.
- 4 Close the cassette holder firmly toward the MA-50.
- 5 Set TAPE SPEED of the BM-77/BM-88 to 4.8.
- 6 Set the tape speed of the MA-50 to 2.4 or 1.2.
Turn on the MA-50.

While using the MA-50, the display window does not work properly.

When the MA-50 is not used
Remove it.


To remove the MA-50
Lift it up.

Notes

- Turn off the MA-50 when it is inserted or removed from the unit, or when the microcassette is wound rapidly (in fast forward or rewind mode).
- As to the insertion and removal of microcassette, refer to the instruction manual of the MA-50.


Telephone Recording (BM-88 only)

To record telephone conversation, connect the optional TL-2 message coupler* to the TELEPHONE PICKUP jack. For further details, refer to the instruction manual of the message coupler.

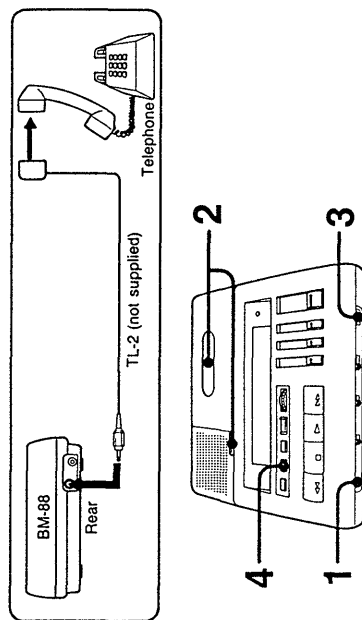

* The TL-2 message coupler cannot be used on some telephones.

- 1 Set **STANDBY/ON** to **ON**.
- 2 Insert a cassette.
- 3 Set **TAPE SPEED** to the desired tape speed.
- 4 Keep **TEL REC** pressed for more than a second.
Telephone recording begins. **REC/ERASE** lamp flickers and **TEL** appears on the display window.



To stop the tape
Press ■ **STOP**.

At the beginning of telephone recording
LTR signal is automatically recorded.

While the LTR signal is being recorded (for about 3 seconds), the unit cannot be stopped even though **STOP** button is pressed.

During telephone recording
Only the **LTR**, **SEC** and **STOP** buttons are operative.

SECTION 3 MECHANICAL ADJUSTMENTS

PRECAUTION

- Clean the following parts with a denatured alcohol-moistened swab:

record/playback head	pinch roller
erase head	rubber belts
capstan	
- Demagnetize the record/playback head with a head demagnetizer.
- Do not use a magnetized screwdriver for the adjustment.
- After the parts adjustments, apply suitable locking compound to the parts adjusted.
- The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Mode	Cassette type torque meter	Meter reading
Forward	CQ-102C	20-45g•cm (0.28-0.62oz•inch)
Fast Forward, Rewind	CQ-201B	80-200g•cm (1.11-2.78 oz•inch)
Back Tension	CQ-102C	1-4g•cm (0.014-0.056oz•inch)


Tape Tension Measurement

Cassette type tension meter	Meter reading
CQ-403A	100-170g (3.5-6.0oz)

Forward Torque Adjustment

Mode : Forward


Cassette type torque meter	Torque	Procedure
CQ-102C	20-45g•cm (0.28-0.62 oz•inch)	Adjust the forward torque by replace the spacer shown in below chart.

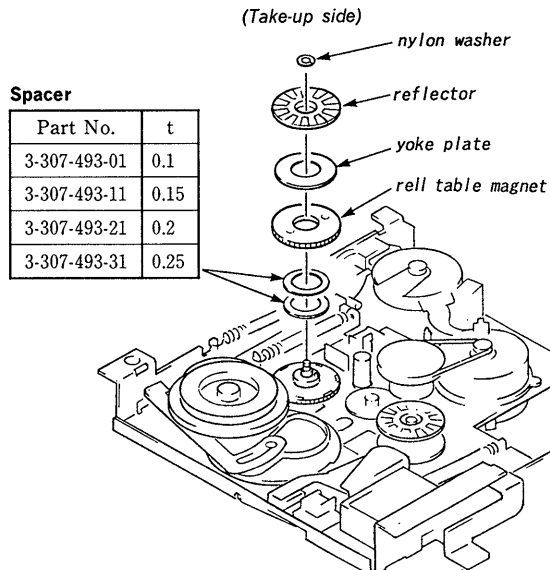

Head Height Adjustment

Procedure :

- Insert the mirror cassette (CQ-009C).
- In playback mode and viewing from the front, adjust the head heights to eliminate tape curl and tape twist at shown by arrows.
- After the adjustments, apply suitable locking compound to screws.

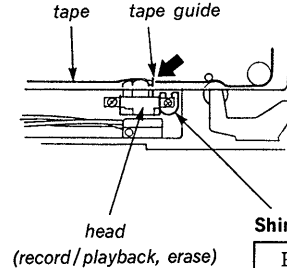

Shim, head height adjustment

Part No.	t
3-578-138-01	0.1
3-578-138-11	0.2

SECTION 4 ELECTRICAL ADJUSTMENTS

PRECAUTION


1. Switches and controls should be set to the positions as follows unless otherwise specified.
 - Switch positions

STANDBY ON switch	: ON
AUTO STOP switch	: ON
SPEAKER switch	: BUILT-IN
TONE control	: max.(H)
VOLUME control	: mechanical mid
SPEED CONTROL switch	: OFF
TAPE SPEED switch	: 4.8
REVERSE TIME control	: 0
2. Standard Input Level :
TELEPHONE PICKUP jack : 300 Ω 0.77mV(-60dB)
3. Standard Output Level :
Speaker : 8 Ω 0.775V(0dB)
4. VSC Ramp Rate, VSC PITCH and VSC Noise Level Adjustments for the VSC chain interact each other. When one of them is readjusted, be sure to perform two other adjustments.
5. Refer to page 29 for the adjustment location.

Record/playback Head Azimuth Adjustment


Procedure :

1. Mode : Playback (LISTEN)

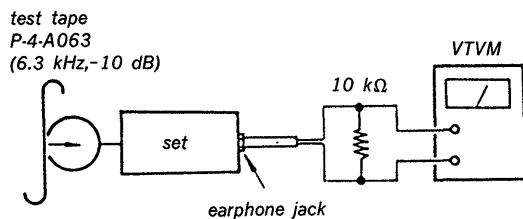

2. Turn the adjustment screw to obtain the maximum reading on VTVM.
Adjustment should be finished with the screw in tightening direction.
3. After the adjustment, lock the adjustment screw with suitable locking compound.


Adjustment Location : record/playback head

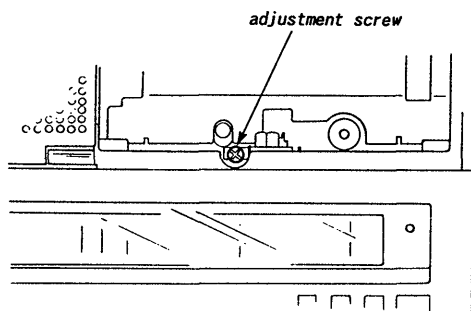

Tape Speed Adjustment

Setup :

Mode : Playback (LISTEN)

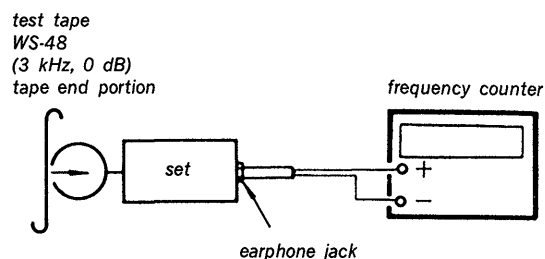

Procedure :

1. SPEED CONTROL switch : OFF
TAPE SPEED switch : 2.4
Adjust RV601 to obtain a 1515 Hz frequency reading.
2. SPEED CONTROL switch : OFF
TAPE SPEED switch : 4.8
Adjust RV602 to obtain a 3030 Hz frequency reading.
3. SPEED CONTROL switch : ON
VSC SPEED control : max. (+)
Adjust RV603 to obtain a 5550 Hz frequency reading.

Adjustment Location : servo board

VSC BBD Bias Adjustment


Note : Adjustments to the VSC chain should be made in this order.

Setting :

SPEED CONTROL switch : VSC
VSC PITCH control : 0

Setup :

Mode : Playback (LISTEN)

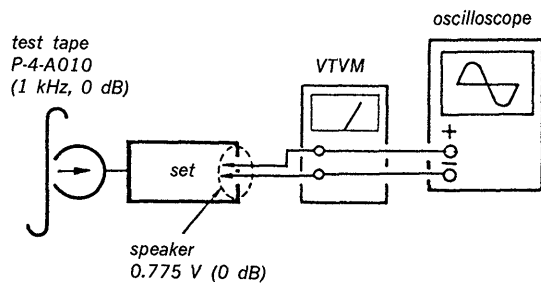

Procedure :


1. Adjust VOLUME control to obtain an undistorted 0.775V(0dB) output level.
2. Adjust RV105 to obtain a maximum sinewave output signal.

Adjustment Location : main board

VSC Ramp Rate Adjustment


Setup :

SPEED CONTROL switch : VSC
VSC PITCH control : max. (+)

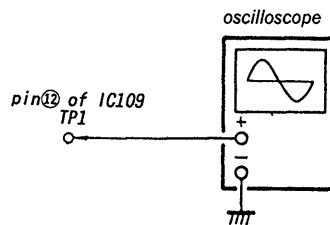

Procedure :

Adjust RV106 to obtain a sawtooth wave as shown below.

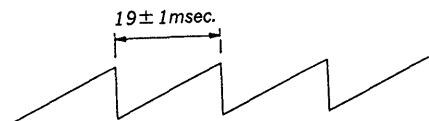


Adjustment Location : main board


VSC PITCH Adjustment

Setting :
SPEED CONTROL switch : VSC
VSC SPEED control : max. (+)

Setup :
Mode : Playback (LISTEN)

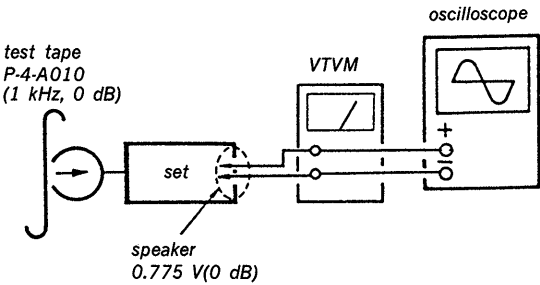

- Procedure :
1. Adjust VOLUME control to obtain an undistorted 0.775V (0dB) output level.
 2. Set VSC PITCH control to minimum "0".
 3. Adjust oscilloscope timebase switch and control to obtain a two-cycle display.
 4. Set VSC PITCH control to maximum (+).
 5. Adjust RV107 to obtain a one-cycle display with oscilloscope settings unchanged.

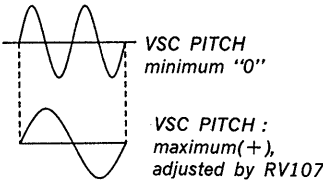


Adjustment Location : main board


VSC Noise Level Adjustment

Setting :
SPEED CONTROL switch : VSC
VSC PITCH control : max. (+)

Setup :
Mode : playback (LISTEN)

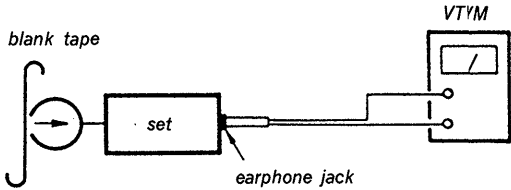


- Procedure :
- Adjust RV108 for a minimum noise output level, or Adjust RV108 to minimum noise position hearing the noise from speaker.


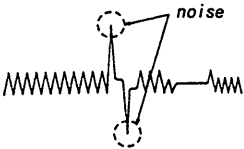


Adjustment Location : main board

Adjustment Location : servo board

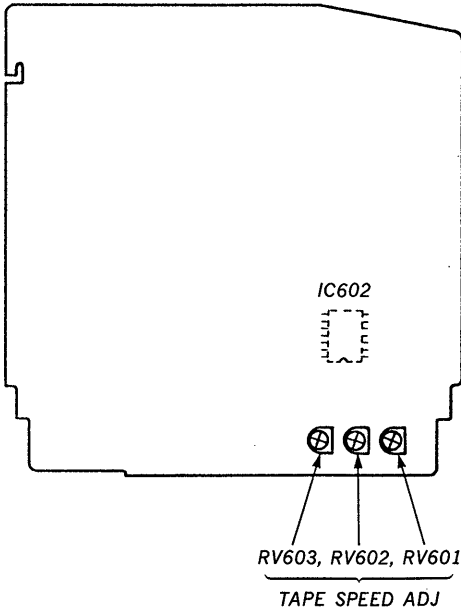


Adjustment Location : main board

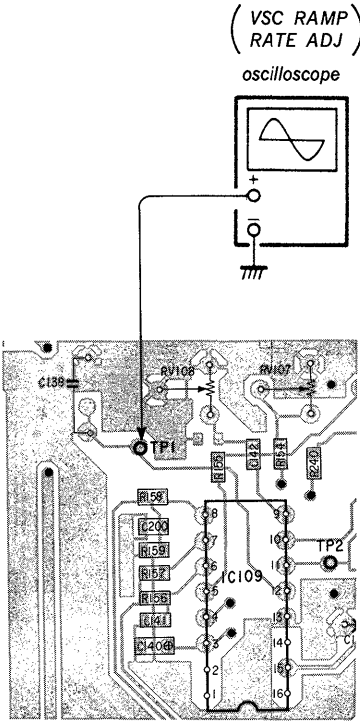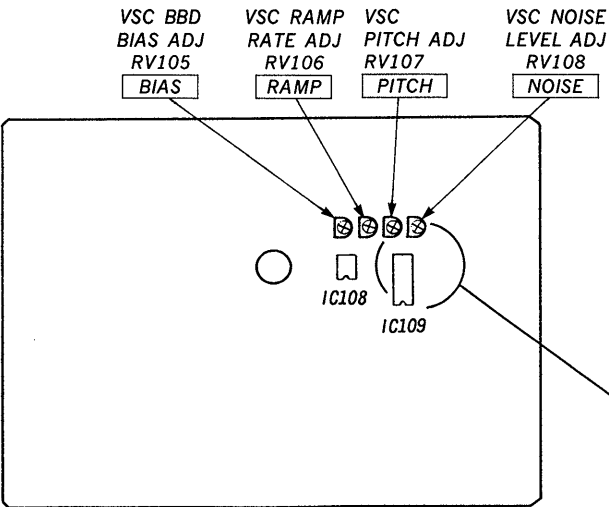

SECTION 5 DIAGRAMS


5-1. SEMICONDUCTOR LEAD LAYOUT

μ PC2406HF

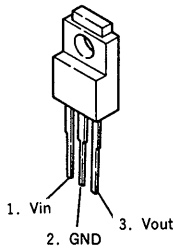


DWA010


1. cathode
2. cathode
3. anode
4. anode




MA152WK

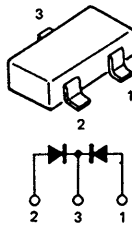


10E2




DTA114YK
DTC114EK
DTC143TK
DTC144EK
2SA1162
2SB624-BV345
2SC2712-YG
2SD1048-X7

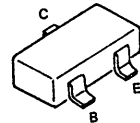


D1F10

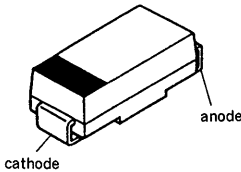


RD3. 3M-B1

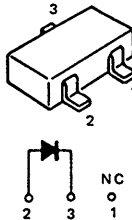


BR4371F

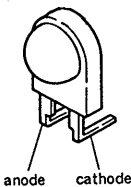


GP-2S09-C

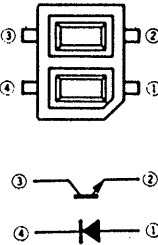

1SS226

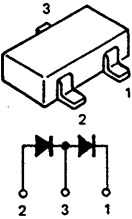

2SB798-DL
2SD999-CLCK

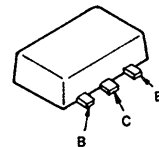


● Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D103	H-7	Q606	G-31
D104	D-11	Q607	E-25
D105	F-11	Q608	E-31
D106	H-17	Q609	E-24
D107	D-6	Q610(※1)	F-25
D108	G-15	Q610(※2)	F-35
D109	C-16	Q611	D-31
D110	G-17	Q612(※1)	F-34
D111	C-17	Q612(※2)	E-25
D112	F-15	Q613	F-31
D113	F-15	Q614	E-31
D114	F-15	Q615	F-31
D115	D-6	Q616	E-31
D116	I-7	Q617	F-31
D117	C-5	Q618	D-29
D601	D-30	Q619	C-29
D602(※1)	G-24		
D602(※2)	G-35		
D604(※1)	G-25		
D604(※2)	F-35		
D605	B-31		
D606(※1)	G-25		
D606(※2)	F-35		
D901	I-19		
IC101	I-13		
IC102	I-12		
IC103	I-10		
IC104	H-9		
IC105	G-9		
IC106	H-8		
IC107	H-11		
IC108	E-9		
IC109	E-8		
IC110	F-10		
IC111	C-5		
IC112	D-16		
IC601	C-30		
IC602	G-26		
IC603	C-25		
IC604	D-28		
Q102	H-7		
Q103	G-7		
Q104	G-11		
Q105	G-11		
Q106	F-11		
Q107	F-11		
Q108	D-11		
Q109	D-12		
Q110	E-12		
Q111	F-12		
Q112	F-11		
Q113	C-16		
Q114	C-16		
Q115	C-14		
Q116	G-7		
Q117	B-8		
Q118	B-8		
Q119	B-7		
Q120	B-8		
Q601	D-30		
Q602	C-29		
Q603	H-30		
Q604	H-30		
Q605	G-31		


※1: used in servo board part number suffix -11.
※2: used in servo board part number suffix -12.

5-2. PRINTED WIRING BOARDS

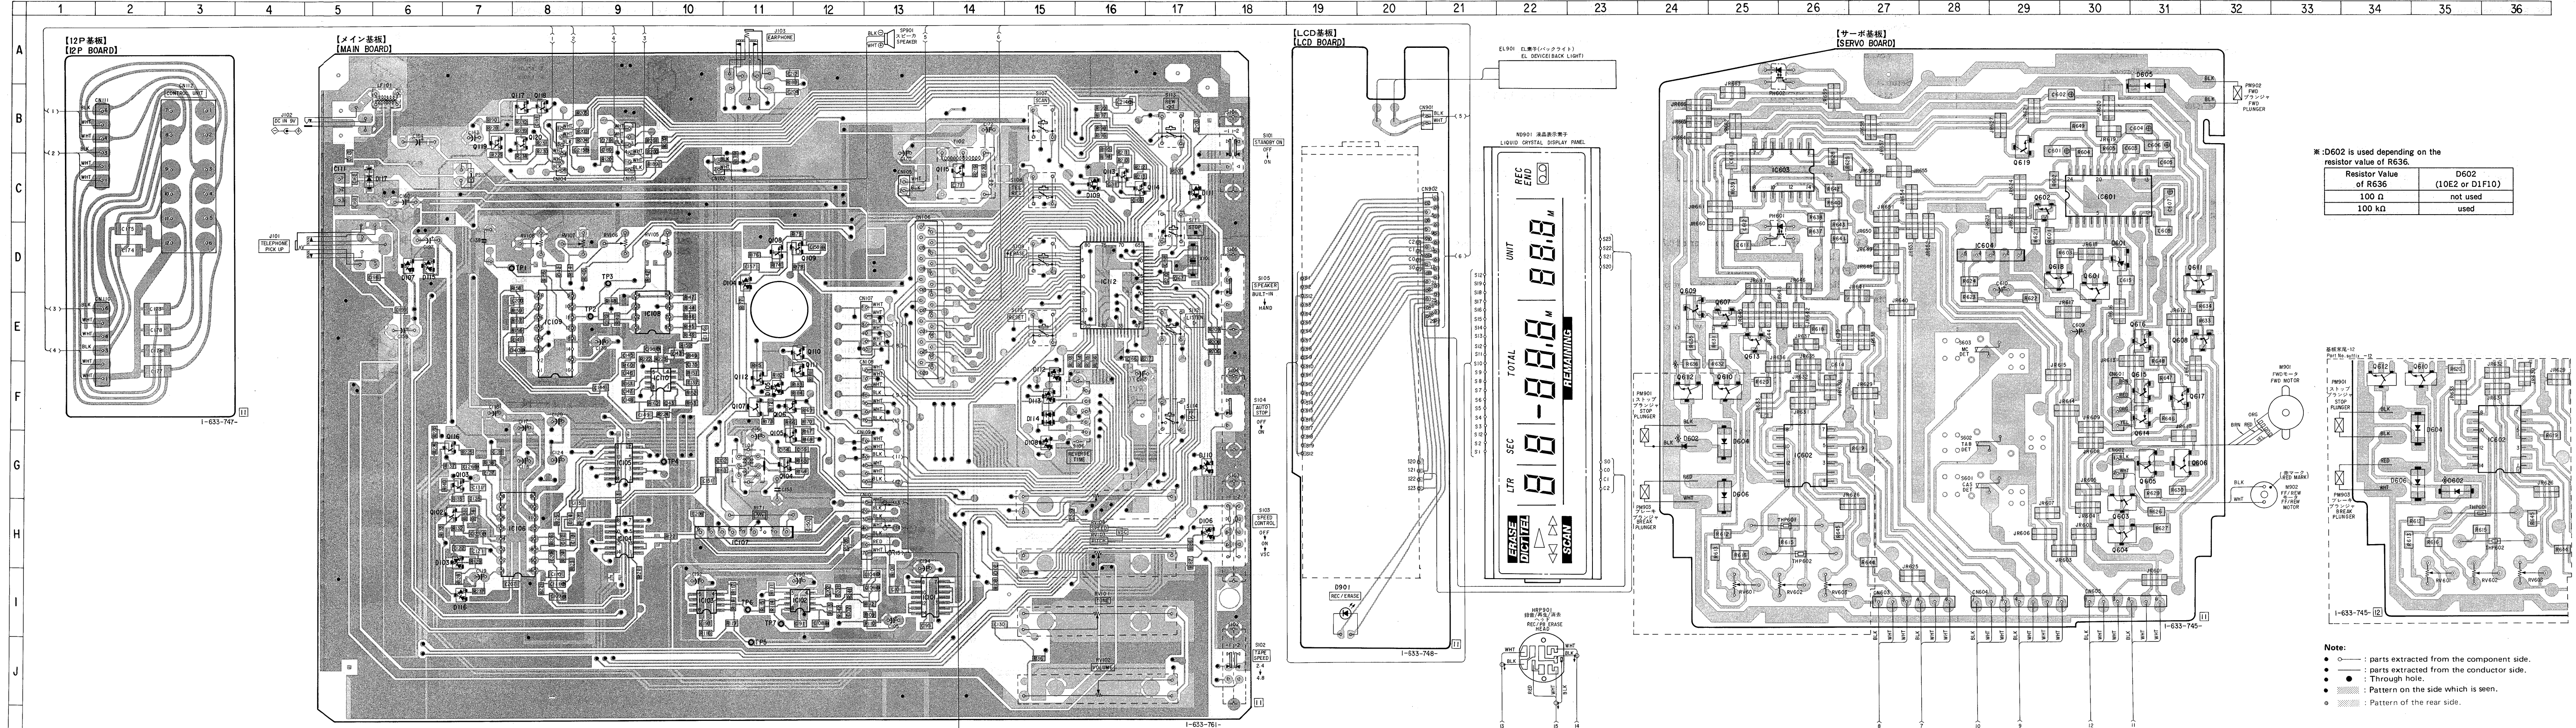


※:D602 is used depending on the resistor value of R636.

Resistor Value of R636	D602 (10E2 or D1F10)
100 Ω	not used
100 kΩ	used

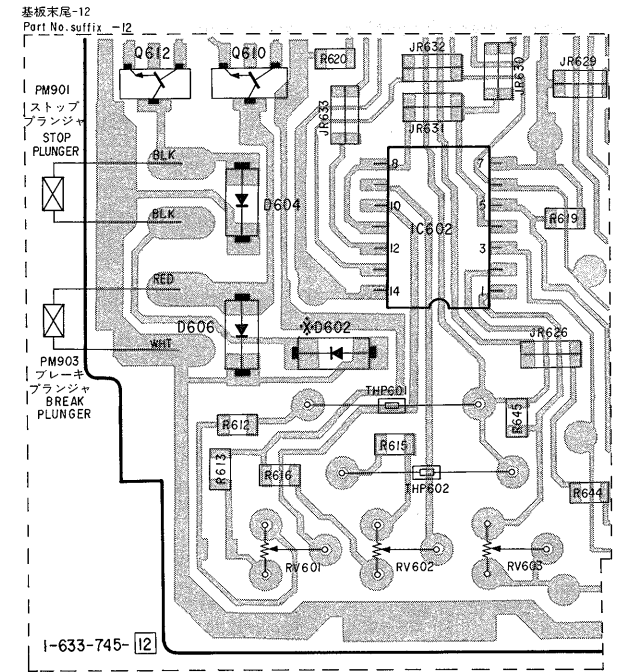

Note:
○ — : parts extracted from the component side.
● — : parts extracted from the conductor side.
● : Through hole.
▨ : Pattern on the side which is seen.
○ : Pattern of the rear side.

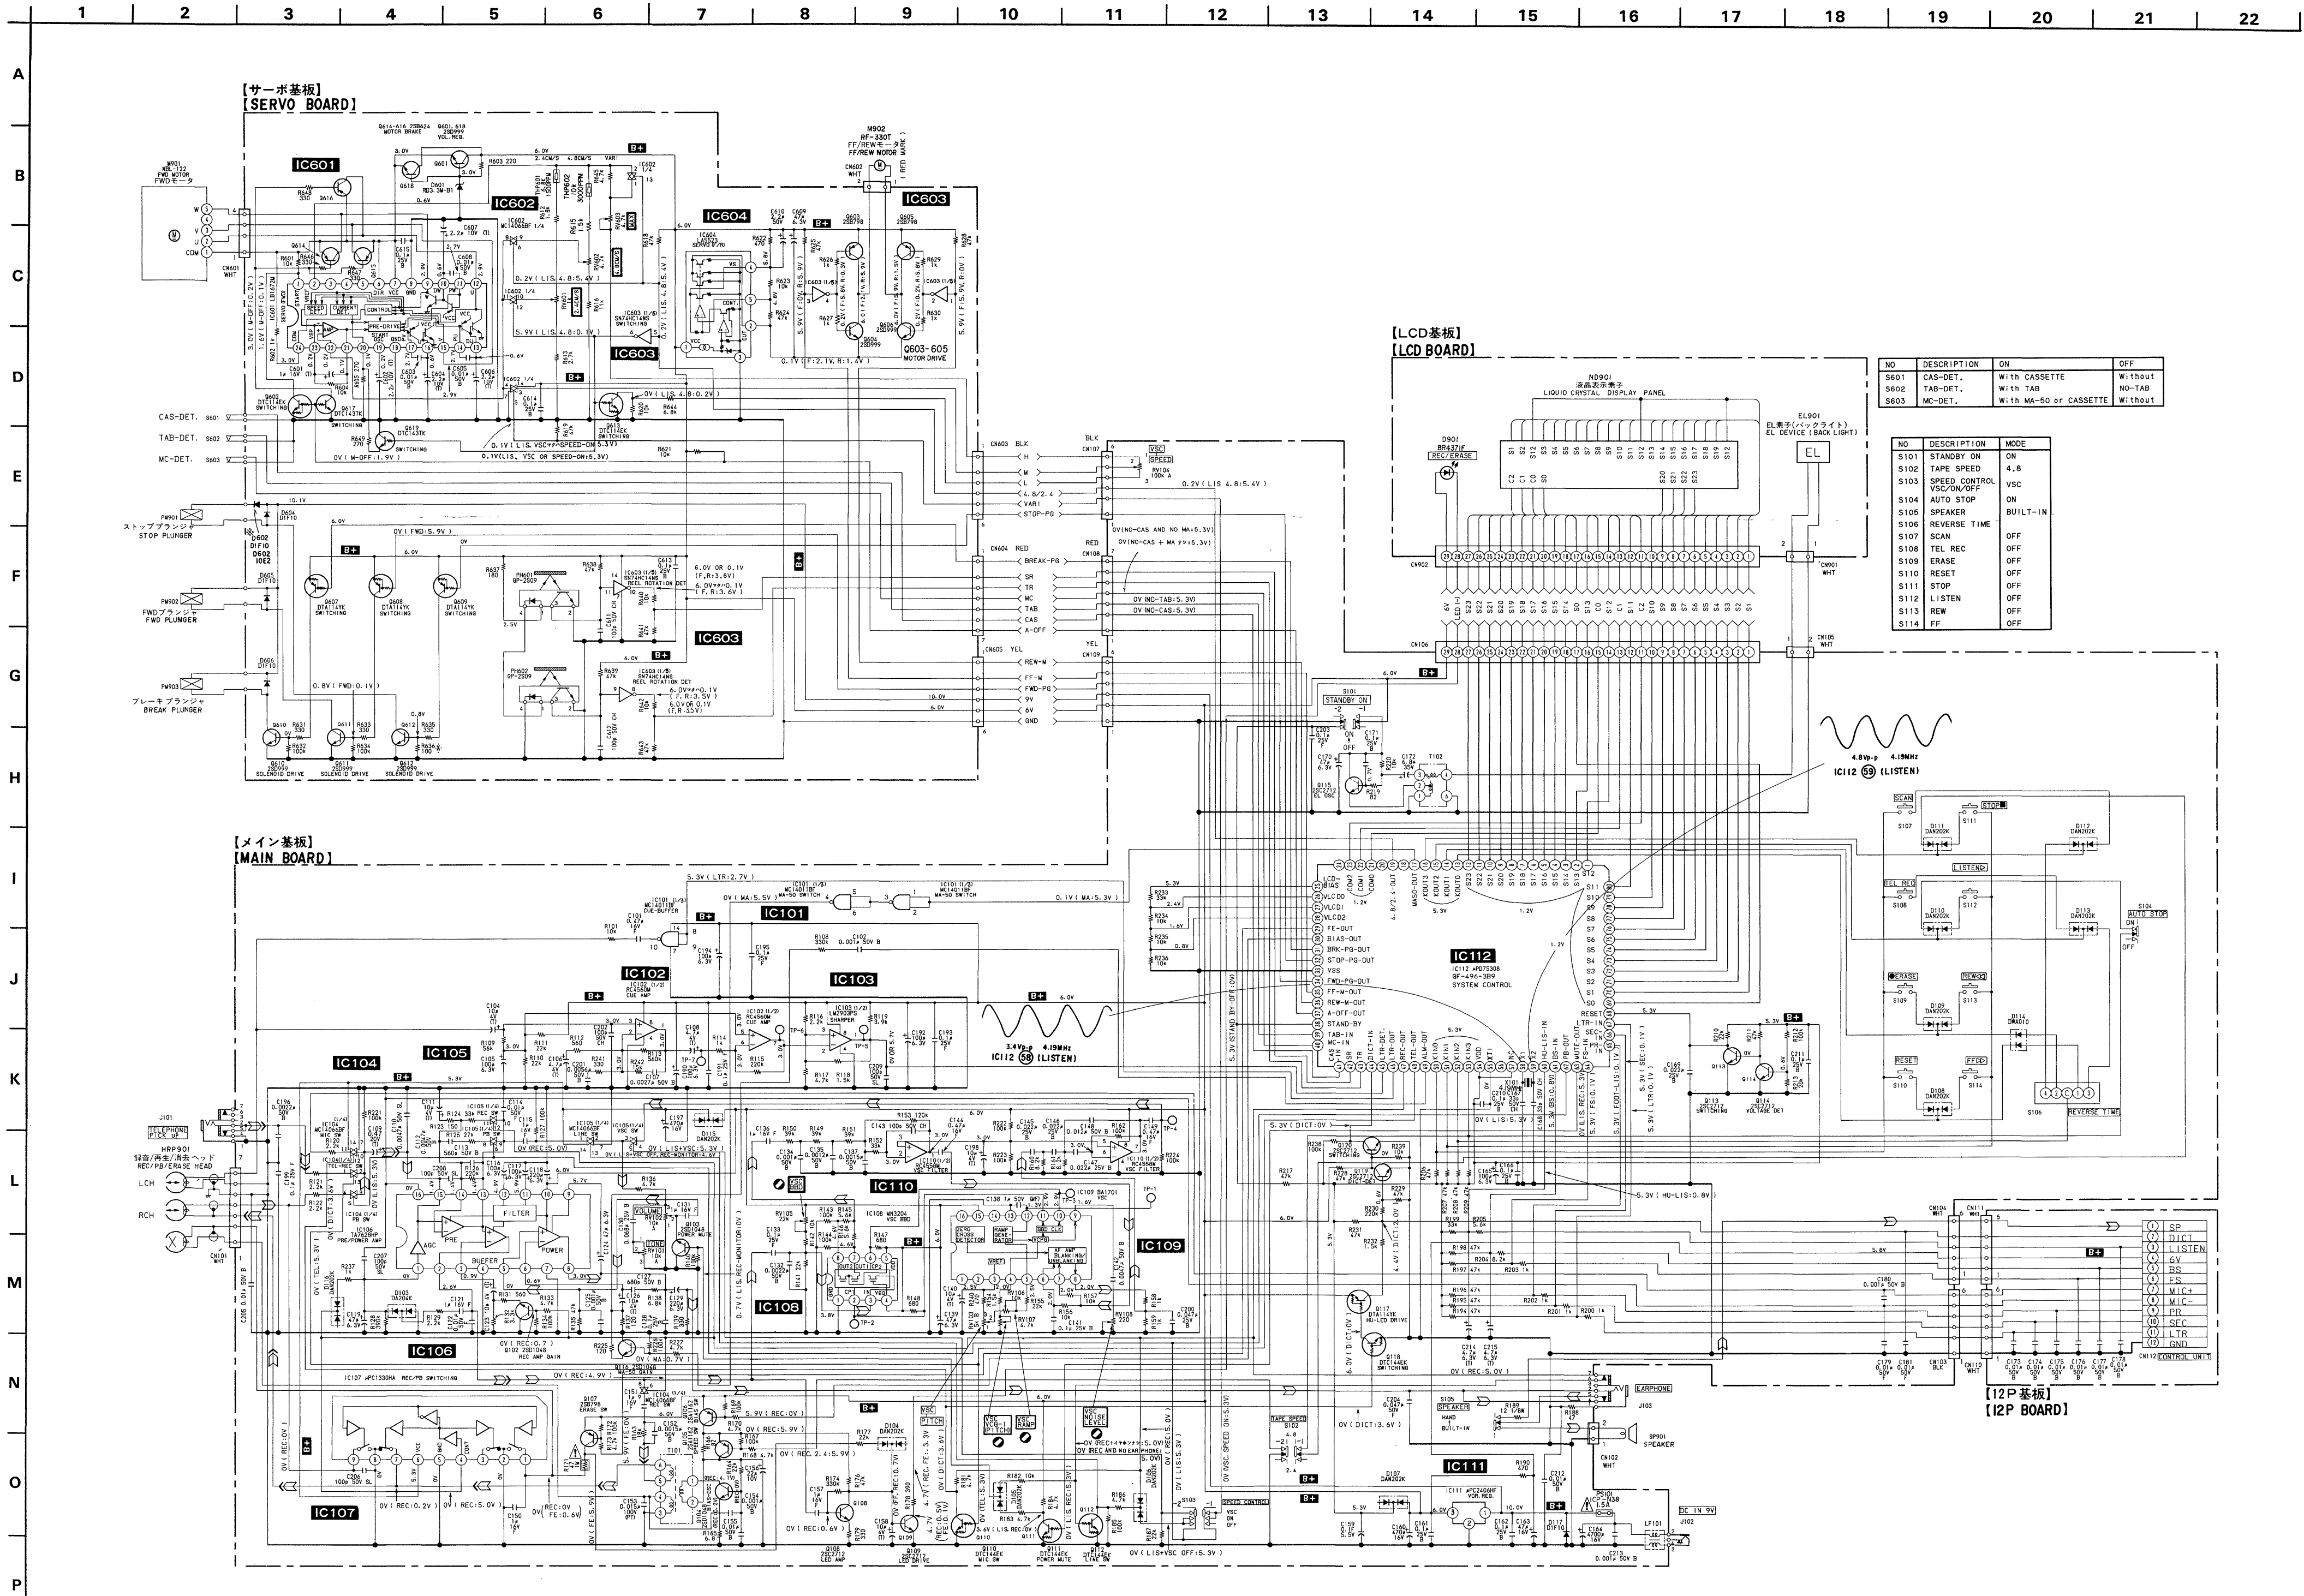

SECTION 6 EXPLODED VIEWS



NOTE:


- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts Example:
(RED) ... KNOB, BALANCE (WHITE)


↑
Cabinet's Color

↑
Parts' Color

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


6-1. CABINET SECTION

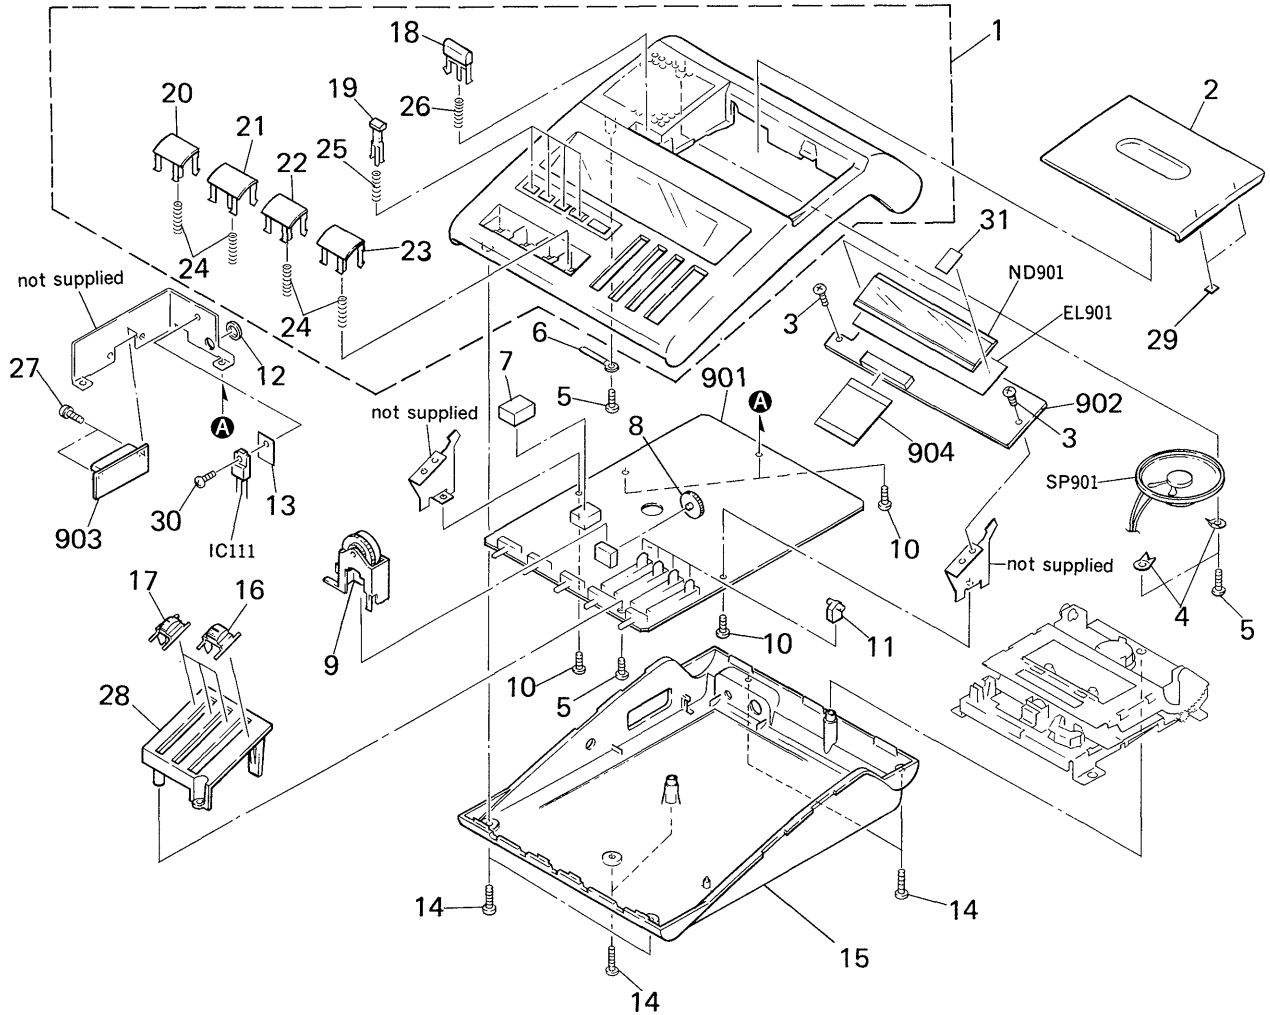

Ref.No	Part No.	Description	Remarks
1	X-3323-538-1	CABINET (FRONT) ASSY	18-26
2	X-3323-532-1	LID ASSY, CASSETTE	
3	7-682-647-09	SCREW +PS 3X6	
4	3-845-110-00	RETAINER, SPEAKER	
5	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
6	★ 3-701-822-00	HOLDER, WIRE	
7	★ 3-323-675-01	PLATE, SHIELD	
8	★ 3-323-678-01	GEAR (SW DRIVING)	
9	X-3323-533-1	KNOB (REVERSE TIME) ASSY	
10	7-682-547-04	SCREW +BVTT 3X6 (S)	
11	★ 3-323-679-01	BUSHING	
12	★ 3-323-680-01	COVER, JACK	
13	4-391-336-01	SHEET, INSULATING	
14	7-685-648-79	SCREW +BVTP 3X12 TYPE2 N-S	
15	X-3323-537-1	CABINET (REAR) ASSY	32
16	X-3323-535-1	KNOB (VOLUME) ASSY	
17	X-3323-536-1	KNOB (TONE/VSC PITCH/VSC SPEED) ASSY	
18	3-323-693-01	BUTTON (EJECT)	
19	3-323-695-01	BUTTON (RESET/ERASE/TEL REC/SCAN)	
20	3-323-698-01	BUTTON (REW)	

Ref.No	Part No.	Description	Remarks
21	3-323-697-01	BUTTON (STOP)	
22	3-323-698-11	BUTTON (LISTEN)	
23	3-323-698-21	BUTTON (FF)	
24	3-323-696-01	SPRING, COMPRESSION	
25	3-323-694-01	SPRING, COMPRESSION	
26	3-323-692-01	SPRING, COMPRESSION	
27	7-621-770-XX	SCREW +P 2.6X8	
28	3-359-104-01	GUIDE, KNOB	
29	3-363-245-01	CUSHION	
30	7-682-548-04	SCREW +B 3X8	
31	9-911-838-XX	CUSHION, MAGNET	
32	★ 3-759-170-01	(UK)... LABEL, MODEL NUMBER (UK)	
901	★ A-3015-855-A	PC BOARD ASSY, MAIN	
902	★ 1-633-748-11	PC BOARD, LCD	
903	★ 1-633-747-11	PC BOARD, I2P	
904	★ 1-575-497-11	WIRE, FLAT TYPE (29 CORE)	
EL901	1-808-962-11	DEVICE, EL	
IC111	8-759-148-79	IC UPC2406HF	
ND901	1-808-961-11	DISPLAY PANEL, LIQUID CRYSTAL	
SP901	1-544-324-11	SPEAKER	


6-2. MECHANISM DECK SECTION (1) (MB-88-59)

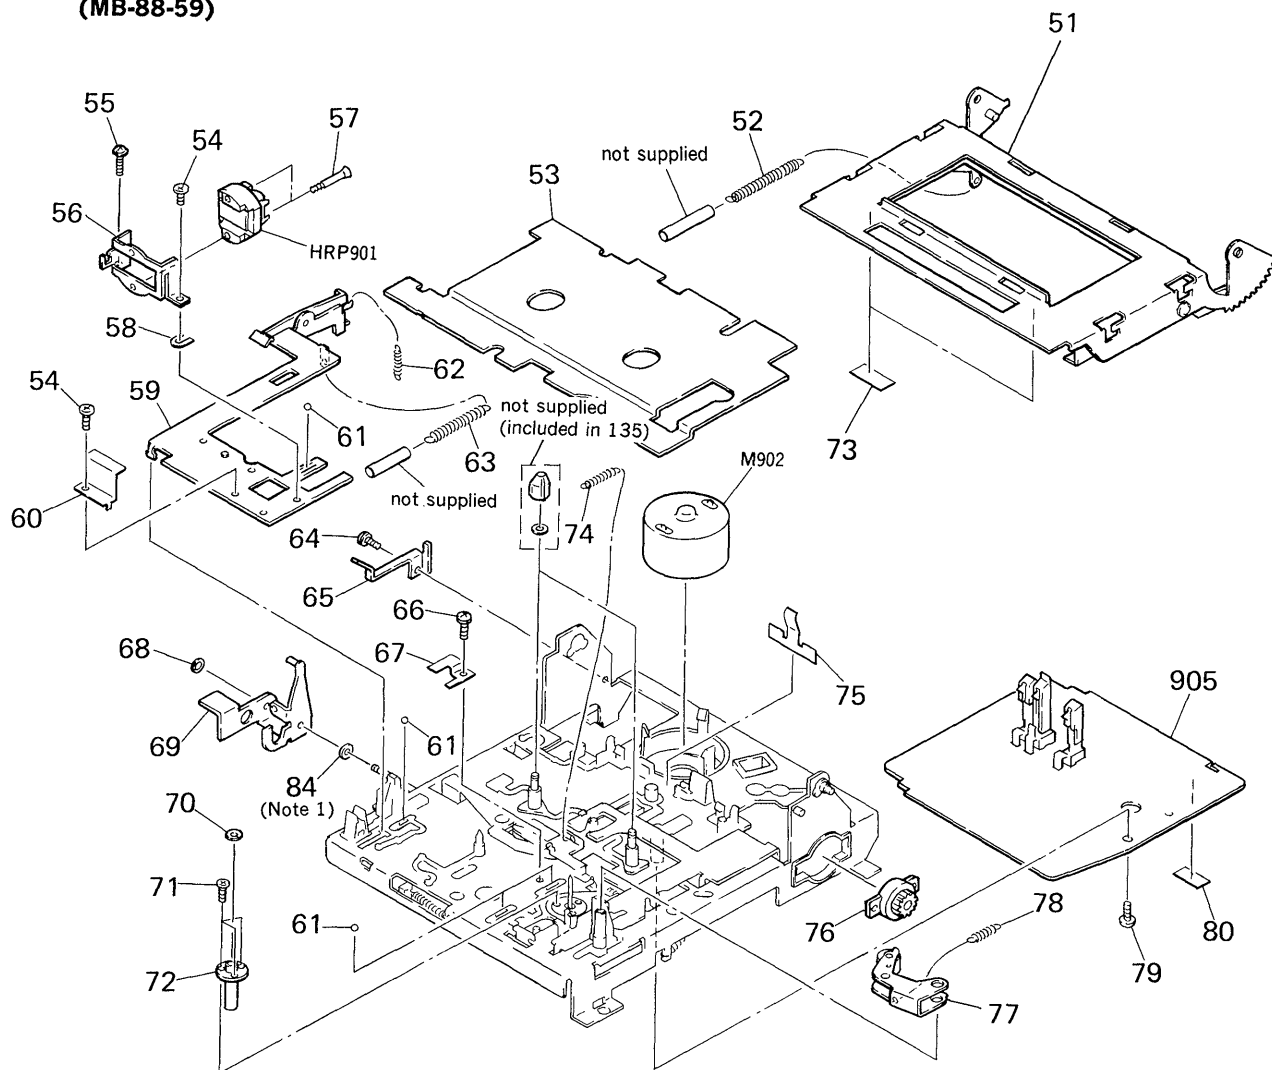

Note 1:
No.84 has not been used on production.

Ref.No	Part No.	Description	Remarks	Ref.No	Part No.	Description	Remarks
51	X-3323-552-1	HOLDER ASSY, CASSETTE	81-83	68	3-307-948-21	WASHER, NYLON	
52	3-359-163-01	SPRING, TENSION		69	*X-3323-551-1	LEVER (EJECT) ASSY	
53	3-359-159-01	PANEL (REEL)		70	3-325-698-01	RING, RETAINING	
54	7-627-553-27	SCREW,PRECISION +P 2X2.5		71	7-627-551-58	SCREW,PRECISION +P 1.4X3	
55	7-621-771-06	SCREW, LOCK		72	3-359-152-01	BEARING, CAPSTAN	
56	*3-359-144-01	HOLDER (HEAD)		73	3-363-246-01	CUSHION (CH)	
57	4-920-347-01	SCREW, HEAD		74	3-305-902-00	SPRING, TENSION	
58	3-578-138-01	SHIM (T=0.1)		75	3-359-125-01	SPRING (CASSETTE RETAINER)	
58	3-578-138-11	SHIM (T=0.2)		76	3-343-248-01	DAMPER (P), SMALL	
59	*X-3323-549-1	CHASSIS ASSY, HEAD		77	X-3323-550-1	PINCH LEVER ASSY	85
60	*3-359-143-01	PLATE, SHIELD		78	3-359-164-01	SPRING, TENSION	
61	7-671-111-11	STEEL, BALL 1.5MM		79	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S	
62	4-858-478-00	SPRING, TENSION		80	3-831-441-11	CUSHION (B)	
63	3-583-501-00	SPRING, TENSION		84	3-701-439-11	WASHER	
64	7-628-253-00	SCREW +PS 2X4		905	*A-3089-549-A	MOUNTED PCB BLOCK ASSY, SERVO	
65	*3-359-126-01	SPRING (CASSETTE HOLDER)		HRP901	1-543-564-11	HEAD, MAGNETIC (REC/PB/ERASE)	
66	7-628-253-90	SCREW +PS 2.6X4		M902	X-3362-206-1	MOTOR ASSY (F/R)	
67	3-323-520-01	SPRING					

6-3. MECHANISM DECK SECTION (2)
(MB-88-59)

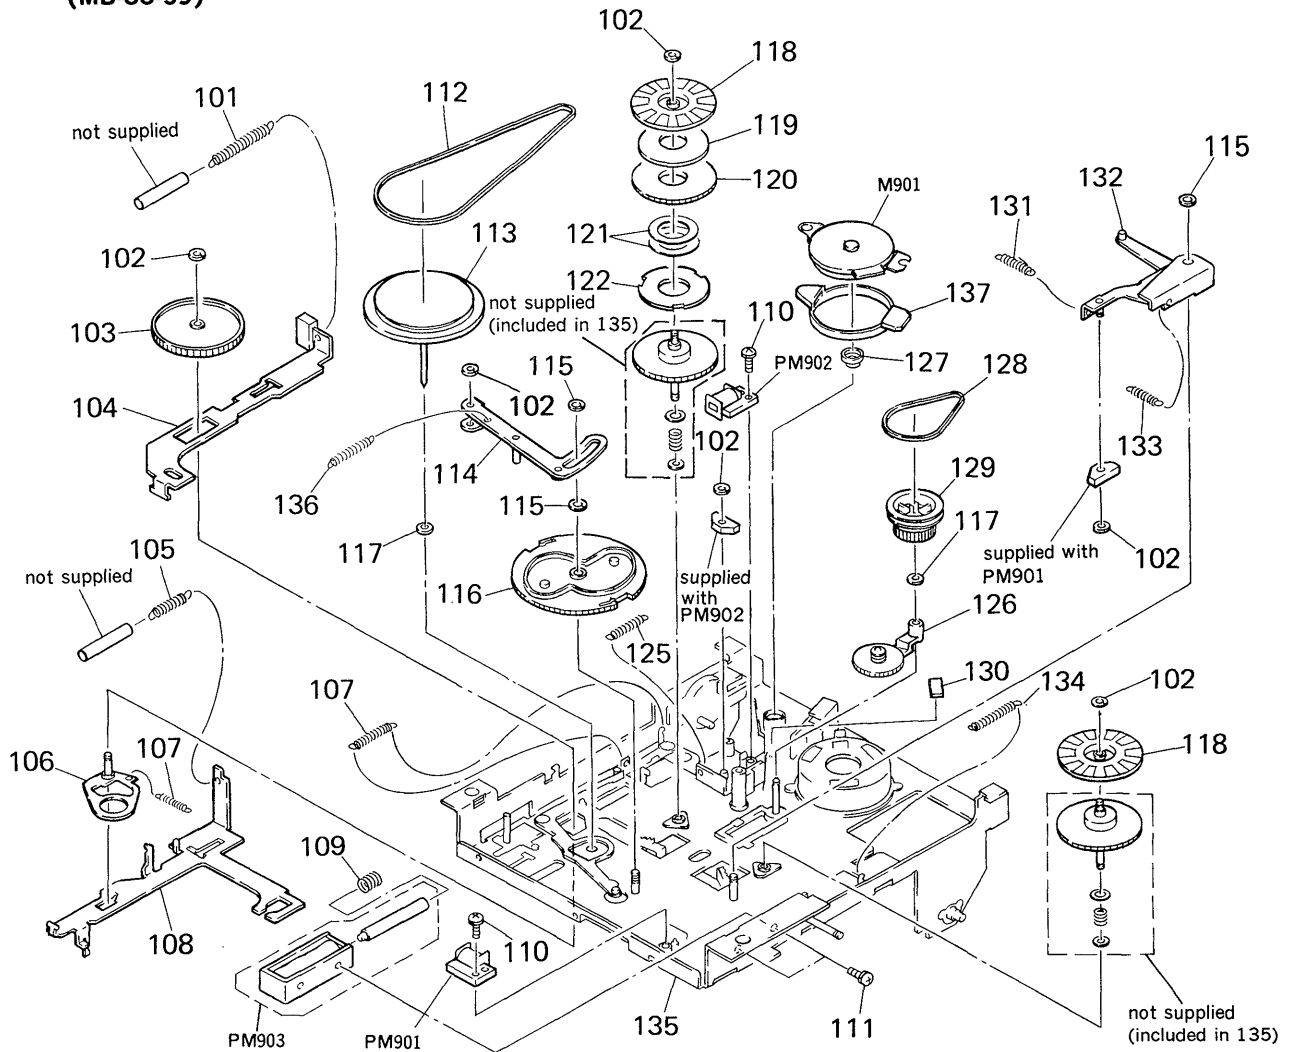

Ref.No	Part No.	Description	Remarks
101	3-359-161-01	SPRING, TENSION	
102	3-307-948-01	WASHER, NYLON	
103	3-362-606-01	GEAR (FWD IDLER)	
104	* X-3323-544-1	PLATE ASSY, FUNCTION, FWD	
105	3-359-162-01	SPRING, TENSION	
106	X-3323-501-1	LEVER ASSY, F.I	
107	3-509-127-00	SPRING, TENSION	
108	* 3-359-153-01	LEVER (FWD)	
109	3-359-160-01	SPRING, COMPRESSION	
110	7-628-253-40	SCREW +PS 2X10	
111	7-628-253-90	SCREW +PS 2.6X4	
112	3-359-158-01	BELT (FWD)	
113	X-3362-056-1	FLYWHEEL ASSY	
114	* X-3323-545-1	ARM (FWD DRIVING) ASSY	
115	3-307-948-21	WASHER, NYLON	
116	3-359-154-01	GEAR (CAM)	
117	3-701-437-01	WASHER	
118	3-359-155-01	REFLECTOR	
119	3-307-313-00	PLATE, YOKE	
120	3-307-953-00	MAGNET, REEL TABLE	
121	3-307-493-01	SPACER (T=0.1)	

Ref.No	Part No.	Description	Remarks
121	3-307-493-11	SPACER (T=0.15)	
121	3-307-493-21	SPACER (T=0.2)	
121	3-307-493-31	SPACER (T=0.25)	
122	3-561-827-00	PLATE (A), HYSTERESIS	
125	3-309-031-00	SPRING, TENSION	
126	X-3323-547-1	GEAR (F/R) ASSY	102, 124
127	* 3-362-434-01	CUSHION (M2)	
128	3-359-157-01	BELT (F/R)	
129	3-359-156-01	IDLER (F/R)	
130	3-362-473-01	CUSHION (M3)	
131	3-533-223-00	SPRING, TENSION	
132	* X-3323-543-1	PLATE ASSY, FUNCTION, STOP	
133	3-542-649-01	SPRING, TENSION	
134	3-642-490-00	SPRING, TENSION	
135	* A-3035-282-A	CHASSIS ASSY	
136	3-555-212-00	SPRING, TENSION	
137	* 3-362-433-01	CUSHION (M)	
M901	1-541-748-11	MOTOR (FWD)	
PM901	1-454-459-21	SOLENOID, PLUNGER	
PM902	1-454-459-21	SOLENOID, PLUNGER	
PM903	1-454-509-11	SOLENOID, PLUNGER	

SECTION 7 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μ F, PF: μ PF.

RESISTORS

- All resistors are in ohms.
- F: nonflammable

COILS

- MMH: mH, UH: μ H

SEMICONDUCTORS

In each case, U: μ , for example:

UA...: μ A..., UPA...: μ PA...,
UPC...: μ PC, UPD...: μ PD...

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No	Part No.	Description			
901	*A-3015-855-A	PC BOARD ASSY, MAIN			
902	*1-633-748-11	PC BOARD, LCD			
903	*1-633-747-11	PC BOARD, 12P			
904	*1-575-497-11	WIRE, FLAT TYPE (29 CORE)			
905	*A-3089-549-A	MOUNTED PCB BLOCK ASSY, SERVO			
CAPACITOR					
C101	1-162-637-11	CERAMIC CHIP	0.47MF		16V
C102	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C104	1-135-201-11	TANTAL. CHIP	10MF	20%	4V
C105	1-124-225-00	ELECT	100MF	20%	6.3V
C106	1-135-151-21	TANTAL. CHIP	4.7MF	20%	4V
C107	1-163-014-00	CERAMIC CHIP	0.0027MF	10%	50V
C108	1-135-151-21	TANTAL. CHIP	4.7MF	20%	4V
C109	1-135-192-21	TANTAL. CHIP	0.47MF	20%	20V
C110	1-162-625-11	CERAMIC CHIP	0.0047MF	5%	50V
C111	1-135-201-11	TANTAL. CHIP	10MF	20%	4V
C112	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C113	1-163-006-11	CERAMIC CHIP	560PF	10%	50V
C114	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C115	1-162-638-11	CERAMIC CHIP	1MF		16V
C116	1-124-225-00	ELECT	100MF	20%	6.3V
C117	1-124-225-00	ELECT	100MF	20%	6.3V
C118	1-126-369-11	ELECT	220MF	20%	6.3V
C119	1-126-154-11	ELECT	47MF	20%	6.3V
C121	1-162-638-11	CERAMIC CHIP	1MF		16V
C122	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C123	1-135-201-11	TANTAL. CHIP	10MF	20%	4V
C124	1-126-154-11	ELECT	47MF	20%	6.3V
C125	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C126	1-135-201-11	TANTAL. CHIP	10MF	20%	4V
C127	1-163-007-11	CERAMIC CHIP	680PF	10%	50V
C128	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C129	1-126-369-11	ELECT	220MF	20%	6.3V
C130	1-164-157-11	CERAMIC CHIP	0.068MF	10%	25V
C131	1-162-638-11	CERAMIC CHIP	1MF		16V
C132	1-164-161-11	CERAMIC CHIP	0.0022MF	10%	50V
C133	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C134	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C135	1-163-010-11	CERAMIC CHIP	0.0012MF	10%	50V
C136	1-162-638-11	CERAMIC CHIP	1MF		16V
C137	1-163-011-11	CERAMIC CHIP	0.0015MF	10%	50V
C138	1-136-177-00	FILM	1MF	5%	50V
C139	1-126-154-11	ELECT	47MF	20%	6.3V
C140	1-135-201-11	TANTAL. CHIP	10MF	20%	4V
C141	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C142	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C143	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C144	1-162-637-11	CERAMIC CHIP	0.47MF		16V
C145	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C146	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C147	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C148	1-163-022-00	CERAMIC CHIP	0.012MF	10%	50V
C149	1-162-637-11	CERAMIC CHIP	0.47MF		16V
C150	1-162-638-11	CERAMIC CHIP	1MF		16V

Ref.No	Part No.	Description			
C151	1-162-638-11	CERAMIC CHIP	1MF		16V
C152	1-163-011-11	CERAMIC CHIP	0.0015MF	10%	50V
C153	1-106-371-00	MYLAR	0.015MF	5%	100V
C154	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C155	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C156	1-124-228-	ELECT	22MF	20%	10V
C157	1-162-638-11	CERAMIC CHIP	1MF		16V
C158	1-135-201-11	TANTAL. CHIP	10MF	20%	4V
C159	1-125-548-11	ELECT	0.1F		5.5V
C160	1-126-103-11	ELECT	470MF	20%	16V
C161	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C162	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C163	1-124-589-11	ELECT	47MF	20%	16V
C164	1-124-898-11	ELECT	4700MF	20%	16V
C165	1-124-225-00	ELECT	100MF	20%	6.3V
C166	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C167	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C168	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C169	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C170	1-126-154-11	ELECT	47MF	20%	6.3V
C171	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C172	1-124-246-00	ELECT	6.8MF	20%	35V
C173	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C174	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C175	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C176	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C177	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C178	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C179	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C180	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C181	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C190	1-124-225-00	ELECT	100MF	20%	6.3V
C191	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C192	1-124-225-00	ELECT	100MF	20%	6.3V
C193	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C194	1-124-225-00	ELECT	100MF	20%	6.3V
C195	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C196	1-164-161-11	CERAMIC CHIP	0.0022MF	10%	50V
C197	1-126-103-11	ELECT	470MF	20%	16V
C198	1-135-201-11	TANTAL. CHIP	10MF	20%	4V
C199	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C200	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V
C201	1-163-018-00	CERAMIC CHIP	0.0056MF	10%	50V
C202	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C203	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C204	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C205	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C206	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C207	1-163-181-00	CERAMIC CHIP	100PF	5%	50V
C208	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C209	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C210	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C211	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C212	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C213	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V

Ref.No	Part No.	Description			
C214	1-135-181-21	TANTAL. CHIP	4.7MF	10%	6.3V
C215	1-135-181-21	TANTAL. CHIP	4.7MF	10%	6.3V
C601	1-135-091-00	TANTAL. CHIP	1MF	20%	16V
C602	1-135-149-21	TANTAL. CHIP	2.2MF	20%	10V
C603	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C604	1-135-149-21	TANTAL. CHIP	2.2MF	20%	10V
C605	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C606	1-135-149-21	TANTAL. CHIP	2.2MF	20%	10V
C607	1-135-149-21	TANTAL. CHIP	2.2MF	20%	10V
C608	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C609	1-126-154-11	ELECT	47MF	20%	6.3V
C610	1-124-257-00	ELECT	2.2MF	20%	50V
C611	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C612	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C613	1-163-077-00	CERAMIC CHIP	0.1MF	10%	25V
C614	1-163-077-00	CERAMIC CHIP	0.1MF	10%	25V
C615	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
CN106	*1-580-286-21	SOCKET, CONNECTOR 29P			
CN107	1-506-471-11	PIN, CONNECTOR 6P			
CN108	1-506-472-11	PIN, CONNECTOR 7P			
CN109	1-506-471-11	PIN, CONNECTOR 6P			
CN112	*1-561-533-00	SOCKET, CONNECTOR 12P (CONTROL UNIT)			
CN603	1-506-471-11	PIN, CONNECTOR 6P			
CN604	1-506-472-11	PIN, CONNECTOR 7P			
CN605	1-506-471-11	PIN, CONNECTOR 6P			
CN902	*1-580-287-21	SOCKET, CONNECTOR 29P			
CNJ101	*1-562-152-11	HOUSING, CONNECTOR 7P			
CNJ102	*1-562-147-11	HOUSING, CONNECTOR 2P			
CNJ103	*1-562-151-11	HOUSING, CONNECTOR 6P			
CNJ104	*1-562-151-11	HOUSING, CONNECTOR 6P			
CNJ105	*1-562-147-11	HOUSING, CONNECTOR 2P			
CNJ107	*1-562-151-11	HOUSING, CONNECTOR 6P			
CNJ108	*1-562-152-31	HOUSING, CONNECTOR 7P			
CNJ109	*1-562-151-11	HOUSING, CONNECTOR 6P			
CNJ601	*1-562-149-11	HOUSING, CONNECTOR 4P			
CNJ602	*1-562-147-11	HOUSING, CONNECTOR 2P			
CNJ901	*1-562-147-11	HOUSING, CONNECTOR 2P			
CNP101	1-506-472-11	PIN, CONNECTOR 7P			
CNP102	1-506-467-11	PIN, CONNECTOR 2P			
CNP103	1-506-471-11	PIN, CONNECTOR 6P			
CNP104	1-506-471-11	PIN, CONNECTOR 6P			
CNP105	1-506-467-11	PIN, CONNECTOR 2P			
CNP601	1-506-469-11	PIN, CONNECTOR 4P			
CNP602	1-506-467-11	PIN, CONNECTOR 2P			
CNP901	1-506-481-11	PIN, CONNECTOR 2P			
D103	8-719-800-76	DIODE 1SS226			
D104	8-719-400-18	DIODE MA152WK			
D105	8-719-400-18	DIODE MA152WK			
D106	8-719-400-18	DIODE MA152WK			
D107	8-719-400-18	DIODE MA152WK			
D108	8-719-400-18	DIODE MA152WK			
D109	8-719-400-18	DIODE MA152WK			
D110	8-719-400-18	DIODE MA152WK			
D111	8-719-400-18	DIODE MA152WK			
D112	8-719-400-18	DIODE MA152WK			
D113	8-719-400-18	DIODE MA152WK			
D114	8-719-940-45	DIODE DWA010			
D115	8-719-400-18	DIODE MA152WK			
D116	8-719-400-18	DIODE MA152WK			
D117	8-719-510-38	DIODE D1F10			
D601	8-719-105-45	DIODE RD3.3M-B1			
D602	8-719-200-02	DIODE 10E2 (Note 1)			
D602	8-719-510-38	DIODE D1F10 (Note 1)			
D604	8-719-510-38	DIODE D1F10			

Note 1:
D602 differs by the set.
10E2 ... Part with lead
D1F10 ... Chip component

Ref.No	Part No.	Description			
D605	8-719-510-38	DIODE D1F10			
D606	8-719-510-38	DIODE D1F10			
D901	8-719-984-02	DIODE BR4371F			
EL901	1-808-962-11	DEVICE, EL			
HRP901	1-543-564-11	HEAD, MAGNETIC (REC/PB/ERASE)			
IC101	8-759-008-79	IC MC14011BF			
IC102	8-759-981-99	IC RC4560M			
IC103	8-759-925-05	IC LM2903PS			
IC104	8-759-932-54	IC BU4066BF			
IC105	8-759-932-54	IC BU4066BF			
IC106	8-759-230-04	IC TA7628HP			
IC107	8-759-143-54	IC UPC1330HA			
IC108	8-759-400-87	IC MN3204			
IC109	8-759-912-78	IC BA1701			
IC110	8-759-700-43	IC RC4558M			
IC111	8-759-148-79	IC UPC2406HF			
IC112	8-759-149-21	IC UPD75308GF-496-3B9			
IC601	8-759-821-20	IC LB1672M			
IC602	8-759-932-54	IC MC14066BF			
IC603	8-759-925-80	IC SN74HC14NS			
IC604	8-759-801-12	IC LA5523			
J101	1-566-891-21	JACK (TELEPHONE PICKUP)			
J102	1-568-727-11	JACK, DC (DC IN 9V)			
J103	1-566-891-21	JACK (EARPHONE)			
JR601	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR602	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR603	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR604	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR605	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR606	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR607	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR608	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR609	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR610	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR611	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR612	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR613	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR614	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR615	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR616	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR617	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR618	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR619	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR620	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR621	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR622	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR623	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR624	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR625	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR626	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR627	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR629	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR630	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR631	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR632	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR633	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR635	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR636	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR637	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR638	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR639	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR640	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR641	1-216-296-00	METAL GLAZE	0	5%	1/8W



Ref.No	Part No.	Description			
JR642	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR643	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR644	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR645	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR646	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR647	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR648	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR649	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR650	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR651	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR652	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR653	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR654	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR655	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR656	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR657	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR658	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR659	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR660	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR661	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR662	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR663	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR664	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR665	1-216-296-00	METAL GLAZE	0	5%	1/8W
JR666	1-216-296-00	METAL GLAZE	0	5%	1/8W
LF101	1-424-361-11	FILTER, LINE			
M902	X-3362-206-1	MOTOR ASSY (F/R)			
ND901	1-808-961-11	DISPLAY PANEL, LIQUID CRYSTAL			
PS101	1-532-675-21	LINK, IC ICP-N38 1.5A			
PH601	8-719-939-23	PHOTO REFLECTOR GP-2S09-C			
PH602	8-719-939-23	PHOTO REFLECTOR GP-2S09-C			
PM901	1-454-459-21	SOLENOID, PLUNGER			
PM902	1-454-459-21	SOLENOID, PLUNGER			
PM903	1-454-509-11	SOLENOID, PLUNGER			
Q102	8-729-800-37	TRANSISTOR 2SD1048-X7			
Q103	8-729-800-37	TRANSISTOR 2SD1048-X7			
Q104	8-729-800-37	TRANSISTOR 2SD1048-X7			
Q105	8-729-216-22	TRANSISTOR 2SA1162			
Q106	8-729-216-22	TRANSISTOR 2SA1162			
Q107	8-729-101-07	TRANSISTOR 2SB798-DL			
Q108	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q109	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q110	8-729-901-01	TRANSISTOR DTC144EK			
Q111	8-729-901-01	TRANSISTOR DTC144EK			
Q112	8-729-901-01	TRANSISTOR DTC144EK			
Q113	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q114	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q115	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q116	8-729-800-37	TRANSISTOR 2SD1048-X7			
Q117	8-729-901-46	TRANSISTOR DTA114YK			
Q118	8-729-901-01	TRANSISTOR DTC144EK			
Q119	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q120	8-729-230-49	TRANSISTOR 2SC2712-YG			
Q601	8-729-140-75	TRANSISTOR 2SD999-CLCK			
Q602	8-729-900-53	TRANSISTOR DTC114EK			
Q603	8-729-101-07	TRANSISTOR 2SB798-DL			
Q604	8-729-140-75	TRANSISTOR 2SD999-CLCK			
Q605	8-729-101-07	TRANSISTOR 2SB798-DL			
Q606	8-729-140-75	TRANSISTOR 2SD999-CLCK			
Q607	8-729-901-46	TRANSISTOR DTA114YK			
Q608	8-729-901-46	TRANSISTOR DTA114YK			
Q609	8-729-901-46	TRANSISTOR DTA114YK			

Ref.No	Part No.	Description
Q610	8-729-140-75	TRANSISTOR 2SD999-CLCK
Q611	8-729-140-75	TRANSISTOR 2SD999-CLCK
Q612	8-729-140-75	TRANSISTOR 2SD999-CLCK
Q613	8-729-900-53	TRANSISTOR DTC114EK
Q614	8-729-141-48	TRANSISTOR 2SB624-BV345
Q615	8-729-141-48	TRANSISTOR 2SB624-BV345
Q616	8-729-141-48	TRANSISTOR 2SB624-BV345
Q617	8-729-900-98	TRANSISTOR DTC143TK
Q618	8-729-140-75	TRANSISTOR 2SD999-CLCK
Q619	8-729-900-98	TRANSISTOR DTC143TK


RESISTOR

R101	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R108	1-216-109-00	METAL GLAZE	330K	5%	1/10W
R109	1-216-091-00	METAL GLAZE	56K	5%	1/10W
R110	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R111	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R112	1-216-043-00	METAL GLAZE	560	5%	1/10W
R113	1-216-115-00	METAL GLAZE	560K	5%	1/10W
R114	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R115	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R116	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R117	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R118	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R119	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W
R120	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R121	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R122	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R123	1-216-029-00	METAL GLAZE	150	5%	1/10W
R124	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R125	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R126	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R127	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R128	1-216-111-00	METAL GLAZE	390K	5%	1/10W
R129	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R131	1-216-043-00	METAL GLAZE	560	5%	1/10W
R132	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R133	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R134	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R135	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R136	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R137	1-216-027-00	METAL GLAZE	120	5%	1/10W
R138	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R139	1-216-037-00	METAL GLAZE	330	5%	1/10W
R140	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R141	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R142	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R143	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R144	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R145	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R146	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R147	1-216-045-00	METAL GLAZE	680	5%	1/10W
R148	1-216-045-00	METAL GLAZE	680	5%	1/10W
R149	1-216-748-11	METAL GLAZE	39K	5%	1/10W
R150	1-216-748-11	METAL GLAZE	39K	5%	1/10W
R151	1-216-748-11	METAL GLAZE	39K	5%	1/10W
R152	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R153	1-216-099-00	METAL GLAZE	120K	5%	1/10W
R154	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R155	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R156	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R157	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R158	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R159	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R160	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W
R161	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W

Note:

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No	Part No.	Description			
R162	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R163	1-216-079-00	METAL GLAZE	18K	5%	1/10W
R164	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R165	1-216-311-00	METAL GLAZE	6.8	5%	1/10W
R166	1-216-023-00	METAL GLAZE	82	5%	1/10W
R167	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R168	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R169	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R170	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R171	△ 1-215-861-00	METAL OXIDE	47	5%	1W F
R172	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R173	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R174	1-216-109-00	METAL GLAZE	330K	5%	1/10W
R176	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R177	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R178	1-216-039-00	METAL GLAZE	390	5%	1/10W
R179	1-216-037-00	METAL GLAZE	330	5%	1/10W
R181	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R182	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R183	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R184	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R185	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R186	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R187	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R188	1-216-017-00	METAL GLAZE	47	5%	1/10W
R189	1-216-152-00	METAL GLAZE	12	5%	1/8W
R190	1-216-041-00	METAL GLAZE	470	5%	1/10W
R194	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R195	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R196	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R197	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R198	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R199	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R200	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R201	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R202	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R203	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R204	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W
R205	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R206	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R207	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R208	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R209	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R210	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R211	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R212	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R213	1-216-080-00	METAL GLAZE	20K	5%	1/10W
R217	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R219	1-216-023-00	METAL GLAZE	82	5%	1/10W
R220	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R221	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R222	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R223	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R224	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R225	1-216-027-00	METAL GLAZE	120	5%	1/10W
R226	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R227	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R228	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R229	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R230	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R231	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R232	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R233	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R234	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R235	1-216-073-00	METAL GLAZE	10K	5%	1/10W

Ref.No	Part No.	Description			
R236	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R237	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R238	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R239	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R240	1-216-041-00	METAL GLAZE	470	5%	1/10W
R241	1-216-037-00	METAL GLAZE	330	5%	1/10W
R242	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R601	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R602	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R603	1-216-033-00	METAL GLAZE	220	5%	1/10W
R604	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R605	1-216-035-00	METAL GLAZE	270	5%	1/10W
R612	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W
R613	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W
R615	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R616	1-216-074-00	METAL GLAZE	11K	5%	1/10W
R618	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R619	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R620	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R621	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R622	1-216-041-00	METAL GLAZE	470	5%	1/10W
R623	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R624	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R625	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R626	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R627	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R628	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R629	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R630	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R631	1-216-037-00	METAL GLAZE	330	5%	1/10W
R632	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R633	1-216-037-00	METAL GLAZE	330	5%	1/10W
R634	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R635	1-216-037-00	METAL GLAZE	330	5%	1/10W
R636	1-216-025-00	METAL GLAZE	100	5%	1/10W
R637	1-216-031-00	METAL GLAZE	180	5%	1/10W
R638	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R639	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R640	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R641	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R642	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R643	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R644	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R645	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R646	1-216-037-00	METAL GLAZE	330	5%	1/10W
R647	1-216-037-00	METAL GLAZE	330	5%	1/10W
R648	1-216-037-00	METAL GLAZE	330	5%	1/10W
R649	1-216-035-00	METAL GLAZE	270	5%	1/10W
RV101	1-230-564-11	RES, VAR, SLIDE 10K (TONE)			
RV102	1-230-564-11	RES, VAR, SLIDE 10K (VOLUME)			
RV103	1-228-886-00	RES, VAR, SLIDE 5K (VSC PITCH)			
RV104	1-237-364-11	RES, VAR, SLIDE 100K (VSC SPEED)			
RV105	1-228-995-00	RES, ADJ, CARBON 22K			
RV106	1-228-994-00	RES, ADJ, CARBON 10K			
RV107	1-228-993-00	RES, ADJ, CARBON 4.7K			
RV108	1-230-504-11	RES, ADJ, CARBON 220			
RV601	1-237-602-11	RES, ADJ, METAL GRAZE 1K			
RV602	1-237-604-11	RES, ADJ, METAL GRAZE 4.7K			
RV603	1-237-604-11	RES, ADJ, METAL GRAZE 4.7K			
S101	1-572-251-11	SWITCH, SLIDE (STANDBY ON)			
S102	1-572-251-11	SWITCH, SLIDE (TAPE SPEED)			
S103	1-571-212-11	SWITCH, SLIDE (SPEED CONTROL)			
S104	1-572-251-11	SWITCH, SLIDE (AUTO STOP)			
S105	1-572-251-11	SWITCH, SLIDE (SPEAKER)			

Note:

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:



Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No	Part No.	Description
S106	1-554-998-11	SWITCH, DIGITAL (REVERSE TIME)
S107	1-554-303-21	SWITCH, KEY BOARD (SCAN)
S108	1-554-303-21	SWITCH, KEY BOARD (TEL REC)
S109	1-554-303-21	SWITCH, KEY BOARD (● ERASE)
S110	1-554-303-21	SWITCH, KEY BOARD (RESET)
S111	1-554-303-21	SWITCH, KEY BOARD (STOP □)
S112	1-554-303-21	SWITCH, KEY BOARD (LISTEN ▷)
S113	1-554-303-21	SWITCH, KEY BOARD (REW ◀◀)
S114	1-554-303-21	SWITCH, KEY BOARD (FF ▶▶)
S601	1-572-248-11	SWITCH, LEAF (CAS DET)
S602	1-571-281-11	SWITCH, LEAF (TAP DET)
S603	1-572-248-11	SWITCH, LEAF (MC DET)
SP901	1-544-324-11	SPEAKER
T101	1-433-364-11	TRANSFORMER, BIAS OSCILLATION
T102	1-406-342-11	TRANSFORMER, OSC
THP601	1-809-132-11	THERMISTOR (POSITIVE)
THP602	1-809-133-11	THERMISTOR (POSITIVE)
X101	1-577-273-11	OSCILLATOR, CERAMIC (4.19MHz)


Ref.No	Part No.	Description
ACCESSORIES & PACKING MATERIALS		

△ 1-465-393-11	(US, Canadian)....	ADAPTOR, AC (AC-980)
△ 1-465-428-11	(UK)....	ADAPTOR, AC (AC-980)
△ 1-465-429-11	(AEP)....	ADAPTOR, AC (AC-980)
3-751-618-11	(Canadian, AEP, UK)....	MANUAL, INSTRUCTION (ENGLISH, FRENCH, GER- MAN, SPANISH)
3-751-618-21	(US)....	MANUAL, INSTRUCTION (ENGLISH)

Note:

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SONY® SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model


SUPPLEMENT-1


File this supplement with the service manual.

Except for Canadian model :
Serial No. 576, 241 and later
Canadian model :
Serial No. A576, 241 and later


Subject : Change of LCD

Liquid crystal display has been changed.
The back light (ND901) and back light drive circuit deleted
and also, mechanism parts are changed.

 : changed portion.
PRINTED WIRING BOARDS
Page 34 (Location : C-14)

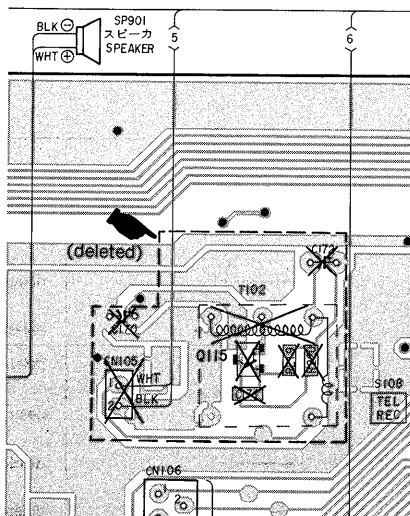


Page 35 (Location : B-22)

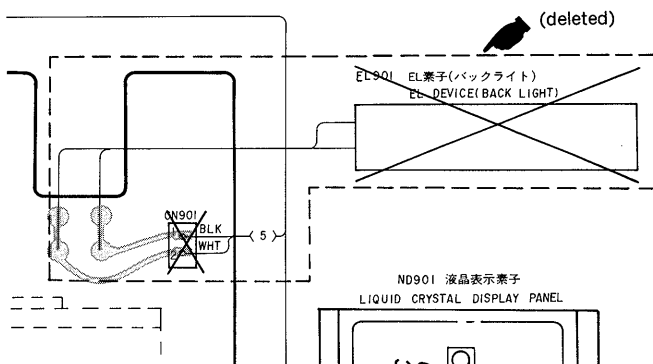


SCHEMATIC DIAGRAM

Page 39 (Location : H-14)

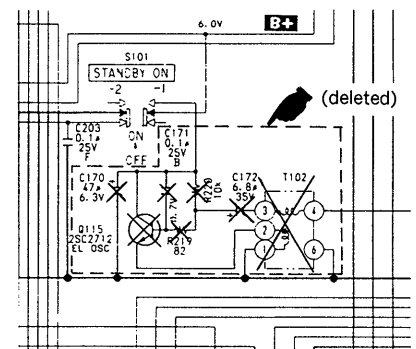


Page 39 (Location : E-18)

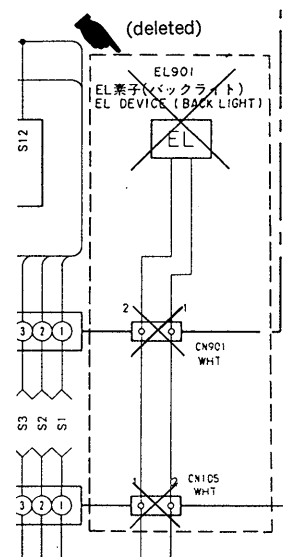


EXPLODED VIEWS

Page 41

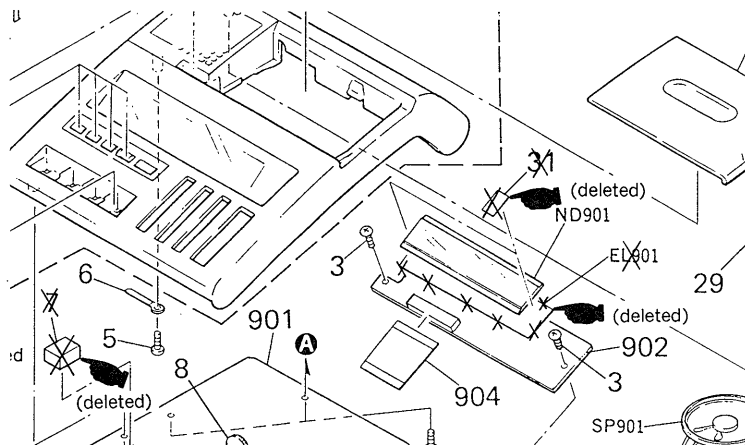

Ref. No.	Part No.	Description
7	* 3-323-675-01	PLATE, SHIELD (deleted)
31	9-911-838-XX	CUSHION, MAGNET (deleted)
EL901	1-808-962-11	DEVICE, EL (deleted)
ND901	1-808-961-21	DISPLAY PANEL, LIQUID CRYSTAL (changed)

Page 42

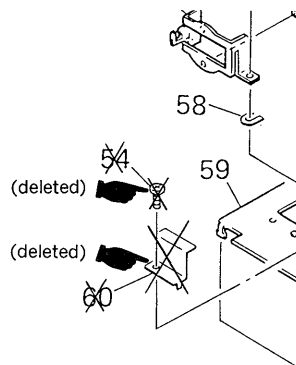

Ref. No.	Part No.	Description
60	* 3-359-143-01	PLATE, SHIELD (deleted)

ELECTRICAL PARTS LIST

Page	Ref. No.	Former		New		Remark
		Part No.	Description	Part No.	Description	
44	C170	1-126-154-11	ELECT 47uF 20% 6.3V	—	—	deleted
	C171	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	—	—	deleted
	C172	1-124-246-00	ELECT 6.8uF 20% 35V	—	—	deleted
45	CNJ105	*1-562-147-11	HOUSING, CONNECTOR 2P	—	—	deleted
	CNJ901	*1-562-147-11	HOUSING, CONNECTOR 2P	—	—	deleted
	CNP105	*1-506-467-11	PIN, CONNECTOR 2P	—	—	deleted
	CNP901	*1-506-481-11	PIN, CONNECTOR 2P	—	—	deleted
	EL901	1-808-962-11	DEVICE, EL	—	—	deleted
46	ND901	1-808-961-11	DISPLAY PANEL, LIQUID CRYSTAL	1-808-961-21	DISPLAY PANEL, LIQUID CRYSTAL	changed
	Q115	8-729-230-49	TRANSISTOR 2SC2712-YG	—	—	deleted
47	R219	1-216-023-00	METAL GLAZE 82 5% 1/10W	—	—	deleted
	R220	1-216-073-00	METAL GLAZE 10K 5% 1/10W	—	—	deleted
48	T102	1-406-342-11	TRANSFORMER, OSC	—	—	deleted

• Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Sony Corporation
General Audio Group